## Parts Catalogue



# **DFP11**Forward Plate

Engine: Honda GX160UH2-QX-4-SD Stage V



No. DL00826127 | 2023-02-15

© 2023 Dynapac GmbH

Your Partner on the Road Ahead

## **General information**

Use only authorized parts. Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability. Any unauthorized use or copying of the contents or any part thereof is prohibited. This applies in particular to trademarks, model denominations, part numbers, and drawings.

#### Instructions for use

This spare parts list contains no safety regulations and is merely intended to assist in the ordering of spare parts.


For information about operating, servicing, or repairing, the relevant Safety and operating instructions must be consulted at all costs.

Please observe the safety instructions listed in the relevant Safety and operating instructions!

Service, repair and wear part kits	Service, repair and wear part kits
4912216977 Repair Ist, Instructions   5.5   4912216987 Repair Ist, Instruction   7.7   DUS249224_00 Service Nit   7.5   DUS2491003 Cellutribining Nit - dozelle   7.5   DUS2491003 Cellutribining Nit - decale   7.7   DUS2491003 Cellutribining Nit - decale   7.8   DUS2491004 Cellutribining Nit - decale   7.8   DUS2491007 Cellutribining Nit - decale   7.8   DUS249107 Cellutribining Nit - decale   7.8   D	Kits-DL92500032 Service, repair and wear part kits
4912216977 Repair Ist, Instructions   5.5   4912216987 Repair Ist, Instruction   7.7   DUS249224_00 Service Nit   7.5   DUS2491003 Cellutribining Nit - dozelle   7.5   DUS2491003 Cellutribining Nit - decale   7.7   DUS2491003 Cellutribining Nit - decale   7.8   DUS2491004 Cellutribining Nit - decale   7.8   DUS2491007 Cellutribining Nit - decale   7.8   DUS249107 Cellutribining Nit - decale   7.8   D	Service, repair and wear part kits
4912/2697 Feopair til, kurtammission   5.5   4912/26987 Eopair til, kurtammission   7.7   DL92490424_00 Service kit   9.9	
Dispayor	
Refurbishing kits  4812064104 efurbishing kit - covering	4812216981 Repair kit, exciter unit
4812004104 Entroishing kit - covering 11 4812004106 Entroishing kit - decals 13 Color Dynapac-Light 15  Field kits 15 Dis2401001 X5-Synthetic plate 17 Dis2401001 X5-Synthetic plate 17 Dis2401002 Off Water sprinkler system 19 Dis2401004 Off Transport wheels mid bow 22 Dis2401004 Off Transport wheels mid bow 23 Dis2401004 Off Transport wheels 24 Dis2400024 Off Transport Wheels 24 Dis2400025 Off Transport Wheels 24 Dis2400026 Off Dis2500026 Off Transport Wheels 24 Dis2400026 Off Dis2500026 Off Dis25000006 Off Dis24000004 Off Dis25000006 Off Dis250000000 Off Dis25000000 Off Dis25000000 Off Dis2500000 Off Dis25000000 Off Dis2500000 Off Dis250000 Off Dis2500000 Off Dis250000 Off Dis2500000 Off Dis2500000 Off Dis250000 Off Dis25000 Off Dis2500	DL92492424_00 Service kit
481204106 Refurbishing kit-decals 15 Color Dynapac-Light 15 Field kits 15 Field kits 15 Dis2401003 10 Water sprinkler system 17 Dis2401003 10 Water sprinkler system 19 Dis2401003 T90-Transport wheels 19 Dis2401004 D0 T1-Transport wheels 22 Dis2401040 00 T1-Transport wheels 22 Dis2401045 00 L16-Steening handle, Middle 22  Lubricants Lubricants Lubricants and operating substances 32  10 Engine Dls2400024 00_010_DFP11-32 Engine / Fitting Parts 34  Engine / Fitting Parts 20 Dis747083_1001E Engine Parts List 36 DIM07023490_00 Canakcase 33 DIM07023490_00 Four Tansk 34 DIM07023490_00 Four Tansk 44 DIM07023490_00 Part Piller 44 DIM07023500_00 Dry Air Filler 44 DIM07023500_00 Dry Air Filler 44 DIM07023500_00 Siencer 38 DIM07023500_00 Siencer 52 DIM07023500_00 Siencer 52 DIM07023500_00 Siencer 54 DIM07023500_00 Centrale Breakerign Coli 58 DIM07023500_00 Centrale Breakerign Coli 58 DIM07023500_00 Centrale Breakerign Coli 58 DIM07023500_00 Centrale Breakerign Coli 56 DIM2400024_00_00 Engine Carrier 54 DIM07023500_00 Centrale Frame with Attachment Parts 50 DIS92400024_00_00 Engine Carrier 54 DIM07023500_00 Centraled Clutch 56 DIM2400024_00_00 Engine Carrier 54 DIM2500026_00_050_DFP11-32 Frame with Attachment Parts 50 DIS92400024_00_065_DFP11-32 Frame with Attachment Parts 50 DIS92500026_00_050_DFP11-32 Frame with Attachment Parts 50 DIS92500026_00_050_DFP11-32 Piate / Foot 72 Piate / Foot 51 DIS92500026_00_050_DFP11-32 Piate / Foot 72 Piate / Foot 51 DIS92500026_00_050_DFP11-32 Piate / Foot 72 Dis9250026_00_050_DFP11-32 Piate / Foot 72 Dis92500026_00_050_DFP11-32 Piate / Foot 72 Dis9250026_00_050_DFP11-32 Piate / Foot 74 Dis9250026_00_050_DFP11-32 Piate / Foot 74 Dis9250026_00_050_DFP11-32 Piate / Foot 74 Dis9250026_00_050_DFP11-32 Piate / Foot 7	Refurbishing kits
Color Dynapac-Light	4812064104 efurbishing kit - covering
Field kits	4812064106 Refurbishing kit - decals
DLS2401001 XS-Synthetic plate	Color Dynapac-Light
DL92401003_D1 Water sprinkter system   19   DL92401005_TB0-Transport wheels.mid bow   21   DL92401040_00 T1-Transport wheels   23   DL92401040_00 T1-Transport wheels   26   DL92401040_00 L15-Steering handle, Middle   26   DL92401040_00 L10-Comfort handle,middle   28   DL92401040_00 L10_D10_DF11-32   DL92400024_00_010_DF11-32 Engine / Fitting Parts   34   DL92400024_00_010_DF11-32 Engine / Fitting Parts   34   Engine / Fitting Parts   36   DLM07023490_00 Crankcase   38   DLM07023490_00 Crankcase   38   DLM07023490_00 Crankcase   40   DLM07023490_00 Part Tank   44   DLM07023890_00 Oline Fled   42   DLM07023890_00 Oline Fled   45   DLM07023800_00 Digiting Blower   48   DLM07023800_00 Oline Blower   50   DLM07023800_00 Coling Blower   50   DL	Field kits
DL92401005 T3P-Transport wheels mid bow   21	DL92401001 X5-Synthetic plate
DL22401040_00 171-Transport wheels   23	DL92401003_01 Water sprinkler system
DLS2401044_00 L15-Steering handle, Middle   28   DLS2401045_00 L20-Comfort handle_middle   29   29   29   29   29   20   20   20	DL92401005 T90-Transport wheels,mid bow
DL92401045_00 L20-Comfort handle_middle         29           Lubricants         32           10 Engine         34           DL92400024_00_010_DFP11-32 Engine / Fitting Parts         34           Engine / Fitting Parts         36           DL05747083_1001E Engine Parts List         36           DLMOT023496_00 Orankcase         38           DLMOT023496_00 Front Cover         40           DLMOT023499_00 Front Cover         40           DLMOT023499_00 Front Cover         44           DLMOT023499_00 Front Cover         44           DLMOT023499_00 Front Cover         40           DLMOT023499_00 Front Cover         40           DLMOT023499_00 Front Cover         40           DLMOT023490_00 Front Cover         44           DLMOT023490_00 Orankcase         42           DLMOT023500_00 Dovering Front Cover         48           DLMOT023500_00 Silencer         50           DLMOT023500_00 Covering         56           DLMOT023500_00 Covering         56           DLMOT023500_00 Covering         56           DL924100350_00 Covering         58           DLMOT023507_00 Carburetor         60           DL92410076_00 Engine Carrier         62           DL92500026_00_050_DFP11-32 Frame	<del>-</del>
Lubricants and operating substances       32         10 Engine         DL92400024_00_010_DFP11-32 Engine / Fitting Parts       34         Engine / Fitting Parts         DL05747063_1001E Engine Parts List       36         DLM0T023498_00 Cylinder Bengine Parts List       36         DLM0T023498_00 Cylinder Head       42         DLM0T023499_00 Fuel Tank       44         DLM0T023499_00 Fuel Tank       44         DLM0T023500_00 Dy Pair Filter       46         DLM0T023500_00 Dy Pair Filter       46         DLM0T023500_00 Dy Pair Filter       46         DLM0T023500_00 Dy Silencer       50         DLM0T023500_00 Do Silencer       50         DLM0T023500_00 Recoil Starter       52         DLM0T023500_00 Recoil Starter       54         DLM0T023500_00 Contact Breaker/Ign Coil       58         DLM0T023500_00 Contact Breaker/Ign Coil       58         DLM0T023500_00 Corputeror       60         DL9240076_00 Engine Carrier       62         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts       68         DL92400002_00_Colspan="2">DL92400002_00_Colspan="2">Colspan="2">Colspan="2">Colspan="2">Colspan="2">Colspan="2">Colspan="2">Colspan="2">Colspan="2">Co	
Lubricants and operating substances       32         10 Engine       34         DL92400024_00_010_DFP11-32 Engine / Fitting Parts       34         Engine / Fitting Parts       38         DLMOT023496_00 Crankcase       38         DLMOT023497_00 Front Cover       40         DLMOT023499_00 Fuel Tank       42         DLMOT023499_00 Fuel Tank       44         DLMOT023500_00 Dry Air Filter       46         DLMOT023500_00 Dry Air Filter       48         DLMOT023500_00 Recoil Starter       50         DLMOT023500_00 Recoil Starter       50         DLMOT023500_00 Recoil Starter       52         DLMOT023500_00 Recoil Starter       56         DLMOT023500_00 Contact Breaker/Ign.Coil       58         DLMOT023500_00 Contact Breaker/Ign.Coil       58         DLB2410076_00 Engine Carrier       66         DL92400076_00 Engine Carrier       66         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       58         Frame with Attachment Parts       58         DL925000026_00_050_DFP11-32 Plate / Foot       70         DL92400002_00 Steering Handle       70         DL92400002_00_DFP01-32 Plate / Foot       72         Plate / Foot       DL23000007_O1 Base Plate       74	DL92401045_00 L20-Comfort handle,middle
10 Engine   DL92400024_00_010_DFP11-32 Engine / Fitting Parts   34	Lubricants
DL92400024_00_010_DFP11-32 Engine / Fitting Parts   34	Lubricants and operating substances
DL92400024_00_010_DFP11-32 Engine / Fitting Parts   34	10 Engine
DL05747063_1001E Engine Parts List       36         DLMOT023496_00 Crankcase       38         DLMOT023498_00 Cylinder Head       42         DLMOT023498_00 For Incommender       42         DLMOT023499_00 Fuel Tank       44         DLMOT023500_00 Dry Air Filter       46         DLMOT023501_00 Throttle Control       48         DLMOT023502_00 Silencer       50         DLMOT023503_00 Cooling Blower       52         DLMOT023504_00 Recoil Starter       54         DLMOT023505_00 Covering       56         DLMOT023506_00 Contact Breaker/Ign.Coil       58         DLMOT023507_00 Carburetor       60         DL92410076_00 Engine Carrier       62         DL92410078_00 Engine Carrier       62         DL92410078_00 Engine Carrier       65         DLEA002910_00 Centrifugal Clutch       66         50 Frame       DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts       70         DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       72         DL23020007_01 Base Plate       74         DL23020007_01 Base Plate       74         DL23020007_01 Exciter Unit       76           100 Acce	•
DL05747063_1001E Engine Parts List       36         DLMOT023496_00 Crankcase       38         DLMOT023498_00 Cylinder Head       42         DLMOT023498_00 For Incommender       42         DLMOT023499_00 Fuel Tank       44         DLMOT023500_00 Dry Air Filter       46         DLMOT023501_00 Throttle Control       48         DLMOT023502_00 Silencer       50         DLMOT023503_00 Cooling Blower       52         DLMOT023504_00 Recoil Starter       54         DLMOT023505_00 Covering       56         DLMOT023506_00 Contact Breaker/Ign.Coil       58         DLMOT023507_00 Carburetor       60         DL92410076_00 Engine Carrier       62         DL92410078_00 Engine Carrier       62         DL92410078_00 Engine Carrier       65         DLEA002910_00 Centrifugal Clutch       66         50 Frame       DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts       70         DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       72         DL23020007_01 Base Plate       74         DL23020007_01 Base Plate       74         DL23020007_01 Exciter Unit       76           100 Acce	Engine / Fitting Parts
DLMOT023496_00 Crankcase       38         DLMOT023497_00 Front Cover       40         DLMOT023498_00 Cylinder Head       42         DLMOT023499_00 Fuel Tank       44         DLMOT023500_00 Dy Air Filter       46         DLMOT023501_00 Throttle Control       48         DLMOT023502_00 Silencer       50         DLMOT023503_00 Cooling Blower       52         DLMOT023504_00 Recoil Starter       54         DLMOT023505_00 Covering       56         DLMOT023506_00 Contact Breaker/Ign.Coll       58         DLMOT023507_00 Carburetor       60         DL92410076_00 Engine Carrier       62         DL92410076_00 Engine Carrier       62         DL92410079_00 Centrifugal Clutch       66         50 Frame         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts       68         DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       72         Plate / Foot       74         DL23020007_01 Base Plate       74         DL23020007_01 Exciter Unit       76         100 Accessories	
DLMOT023498_00 Cylinder Head       40         DLMOT023498_00 Cylinder Head       42         DLMOT023500_00 Fuel Tank       44         DLMOT023500_00 Dry Air Filter       46         DLMOT023501_00 Throttle Control       48         DLMOT023502_00 Silencer       50         DLMOT023503_00 Cooling Blower       52         DLMOT023504_00 Recoil Starter       54         DLMOT023505_00 Covering       56         DLMOT023506_00 Contact Breaker/Ign.Coil       58         DLMOT023507_00 Carburetor       60         DL92410076_00 Engine Carrier       62         DL92410076_00 Engine Carrier       62         DL92410038_00 Engine       64         DLE2020021_00 Centrifugal Clutch       66         50 Frame         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts         DL23060047_00 Steering Handle       70         65 Plate         DL23020007_01 Base Plate       72         Plate / Foot       72         DL23020007_01 Base Plate       74         DL23020007_01 Exciter Unit       76          100 Accessories	
DLMOT023498_00 Cylinder Head       42         DLMOT023499_00 Fuel Tank       44         DLMOT023500_00 Dry Air Filter       46         DLMOT023501_00 Throttle Control       48         DLMOT023502_00 Silencer       50         DLMOT023503_00 Cooling Blower       52         DLMOT023504_00 Reciol Starter       54         DLMOT023505_00 Covering       56         DLMOT023506_00 Covering       56         DLMOT023506_00 Covering       60         DL92410076_00 Engine Carrier       60         DL92410076_00 Engine Carrier       62         DL92410838_00 Engine       64         DLEA002910_00 Centrifugal Clutch       66         50 Frame         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts         DL323060047_00 Steering Handle       70         65 Plate         DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot         DL23020007_01 Base Plate       74         DL23020007_01 Exciter Unit       76         100 Accessories	
DLMOT023499_00 Fuel Tank       44         DLMOT023500_00 Dry Air Filter       46         DLMOT023501_00 Throttle Control       48         DLMOT023502_00 Silencer       50         DLMOT023503_00 Cooling Blower       52         DLMOT023504_00 Recoil Starter       54         DLMOT023505_00 Covering       56         DLMOT023506_00 Contact Breaker/Ign.Coil       58         DLMOT023506_00 Contact Breaker/Ign.Coil       58         DLMOT023507_00 Carburetor       60         DL92410076_00 Engine Carrier       62         DL92410038_00 Engine       64         DLEA002910_00 Centrifugal Clutch       66         50 Frame       56         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts       68         DL23060047_00 Steering Handle       70         65 Plate       DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       72         DL23020007_01 Base Plate       74         DL23020007_01 Exciter Unit       76         100 Accessories	
DLMOT023500_00 Dry Air Filter       .46         DLMOT023501_00 Throttle Control       .48         DLMOT023502_00 Silencer       .50         DLMOT023503_00 Cooling Blower       .52         DLMOT023504_00 Recoil Starter       .54         DLMOT023505_00 Covering       .56         DLMOT023506_00 Contact Breaker/Ign.Coil       .58         DLMOT023507_00 Carburetor       .60         DL92410076_00 Engine Carrier       .62         DL92410838_00 Engine       .64         DLEA002910_00 Centrifugal Clutch       .66         50 Frame       .66         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       .68         Frame with Attachment Parts       .68         DL92400024_00_065_DFP11-32 Plate / Foot       .72         Plate / Foot       .72         DL3020007_01 Base Plate       .74         DL23010002_01 Exciter Unit       .76         100 Accessories	
DLMOT023501_00 Throttle Control       .48         DLMOT023502_00 Silencer       .50         DLMOT023503_00 Cooling Blower       .52         DLMOT023504_00 Recoil Starter       .54         DLMOT023505_00 Covering       .56         DLMOT023506_00 Contact Breaker/Ign.Coil       .58         DLMOT023507_00 Carburetor       .60         DL92410076_00 Engine Carrier       .62         DL924100838_00 Engine       .64         DLEA002910_00 Centrifugal Clutch       .66         50 Frame         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       .68         Frame with Attachment Parts         DL92300024_00_055_DFP11-32 Plate / Foot       .70         65 Plate         DL92400024_00_065_DFP11-32 Plate / Foot       .72         Plate / Foot         DL23020007_01 Base Plate       .74         DL23010002_01 Exciter Unit       .76         100 Accessories	
DLMOT023502_00 Silencer       50         DLMOT023503_00 Cooling Blower       52         DLMOT023504_00 Recoil Starter       54         DLMOT023505_00 Covering       56         DLMOT023506_00 Contact Breaker/Ign.Coil       58         DLMOT023507_00 Carburetor       60         DL92410076_00 Engine Carrier       62         DL92410838_00 Engine       64         DLEA002910_00 Centrifugal Clutch       66         50 Frame         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts         DL23060047_00 Steering Handle       70         65 Plate       DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       DL23020007_01 Base Plate       74         DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76          100 Accessories	
DLMOT023504_00 Recoil Starter       54         DLMOT023505_00 Covering       56         DLMOT023506_00 Contact Breaker/Ign.Coil       58         DLMOT023507_00 Carburetor       60         DL92410076_00 Engine Carrier       62         DL92410838_00 Engine       64         DLEA002910_00 Centrifugal Clutch       66         50 Frame         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts         DL923060047_00 Steering Handle       70         65 Plate         DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       72         DL23020007_01 Base Plate       74         DL23020007_01 Exciter Unit       76         100 Accessories	DLMOT023502_00 Silencer
DLMOT023505_00 Covering       56         DLMOT023506_00 Contact Breaker/Ign.Coil       58         DLMOT023507_00 Carburetor       60         DL92410076_00 Engine Carrier       62         DL92410838_00 Engine       64         DLEA002910_00 Centrifugal Clutch       66         50 Frame         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts         DL23060047_00 Steering Handle       70         65 Plate         DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       72         DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76         100 Accessories	DLMOT023503_00 Cooling Blower
DLMOT023506_00 Contact Breaker/Ign.Coil       58         DLMOT023507_00 Carburetor       60         DL92410076_00 Engine Carrier       62         DL92410838_00 Engine       64         DLEA002910_00 Centrifugal Clutch       66         50 Frame       50         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts       70         65 Plate       70         DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       74         DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76         100 Accessories       100 Accessories	DLMOT023504_00 Recoil Starter
DLMOT023507_00 Carburetor       60         DL92410076_00 Engine Carrier       62         DL92410838_00 Engine       64         DLEA002910_00 Centrifugal Clutch       66         50 Frame       DL92500026_00_050_DFP11-32 Frame with Attachment Parts         DL23060047_00 Steering Handle       70         65 Plate       DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot         DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76	DLMOT023505_00 Covering
DL92410076_00 Engine Carrier       62         DL92410838_00 Engine       64         DLEA002910_00 Centrifugal Clutch       66         50 Frame       English	DLMOT023506_00 Contact Breaker/Ign.Coil
DL92410838_00 Engine       64         DLEA002910_00 Centrifugal Clutch       66         50 Frame <ul> <li>DL92500026_00_050_DFP11-32 Frame with Attachment Parts</li> <li>Erame with Attachment Parts</li> <li>DL23060047_00 Steering Handle</li> <li>70</li> </ul> 65 Plate     DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       72         DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76         100 Accessories	DLMOT023507_00 Carburetor
DLEA002910_00 Centrifugal Clutch       66         50 Frame       DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts       70         DL23060047_00 Steering Handle       70         65 Plate       0         DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       74         DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76         100 Accessories	
50 Frame         DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts       70         DL23060047_00 Steering Handle       70         65 Plate       DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76         100 Accessories	
DL92500026_00_050_DFP11-32 Frame with Attachment Parts       68         Frame with Attachment Parts         DL23060047_00 Steering Handle       70         65 Plate         DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       72         DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76         100 Accessories	DLEA002910_00 Centrifugal Clutch
Frame with Attachment Parts         DL23060047_00 Steering Handle       70         65 Plate       DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       72         DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76         100 Accessories	
DL23060047_00 Steering Handle       70         65 Plate       DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76         100 Accessories       100 Accessories	DL92500026_00_050_DFP11-32 Frame with Attachment Parts
65 Plate         DL92400024_00_065_DFP11-32 Plate / Foot       .72         Plate / Foot         DL23020007_01 Base Plate       .74         DL23010002_01 Exciter Unit       .76         100 Accessories	
DL92400024_00_065_DFP11-32 Plate / Foot       72         Plate / Foot       DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76         100 Accessories       72	DL23060047_00 Steering Handle
Plate / Foot         DL23020007_01 Base Plate       74         DL23010002_01 Exciter Unit       76         100 Accessories	
DL23020007_01 Base Plate	DL92400024_00_065_DFP11-32 Plate / Foot
DL23010002_01 Exciter Unit	Plate / Foot
100 Accessories	DL23020007_01 Base Plate
	DL23010002_01 Exciter Unit
DL92400004_00_100_DFP11-32 Accessories	100 Accessories
	DL92400004_00_100_DFP11-32 Accessories

DL92410914_00 Decals	80
110 Options	
DL92500026_00_110_DFP11-32 Special Equipment	82
Special Equipment	
DL23000216_00 L15-Steering handle, Middle	. 84
DL92400104_01 W1-Water sprinkler system	
DL23003471_00 Water tank, assembled	88
DL23000214_00 L19-Comfort handle	90
DL23000218_00 L20-Comfort handle,middle	92
DL23000614_01 T90-Transport wheels,mid bow	94
DL23000616_00 T1-Transport wheels	96

Service, repair and wear part kits Kits-DL92500032 Service, repair and wear part kits

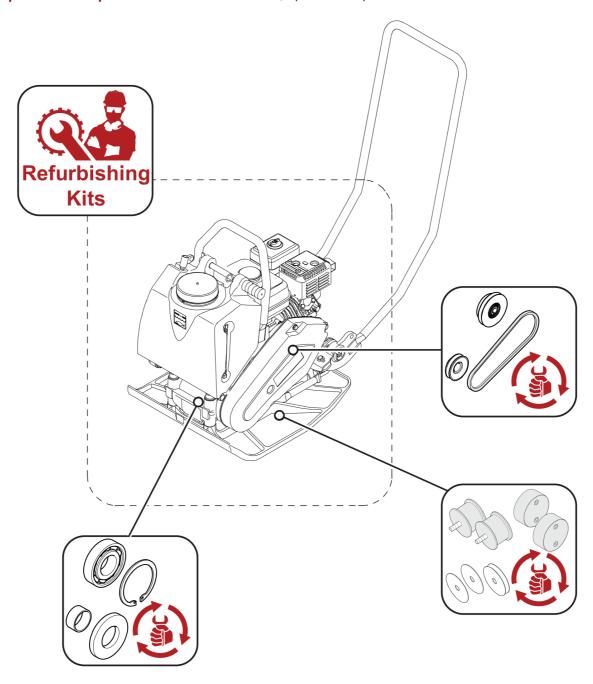









Item	Part No.	Qty	Name	SN INFO
1			Service, repair and wear part kits	
1.1	4812216973	1	Repair kit, shock-absorber	
1.2	4812216977	1	Repair kit, transmission	
1.3	4812216981	1	Repair kit, exciter unit	
1.4	DL92492424	1	Service kit	
2			Refurbishing kit	
2.1	4812064104	1	Refurbishing kit - covering	
2.2	4812064106	1	Refurbishing kit - decals	
2.3	-		Color Dynapac-Light	
3			Field kit	
3.1	DL92401001	1	X5-Synthetic plate	
3.2	DL92401003	1	W1-Water sprinkler system	
3.3	DL92401005	1	T90-Transport wheels,mid bow	
3.4	DL92401040	1	T1-Transport wheels	
3.5	DL92401044	1	Steering handle, Middle	
3.6	DL92401045	1	L20-Comfort handle,middle	
4	PNNA		Lubricants and operating substances	

Service, repair and wear part kits 4812216973 Repair kit, shock-absorber

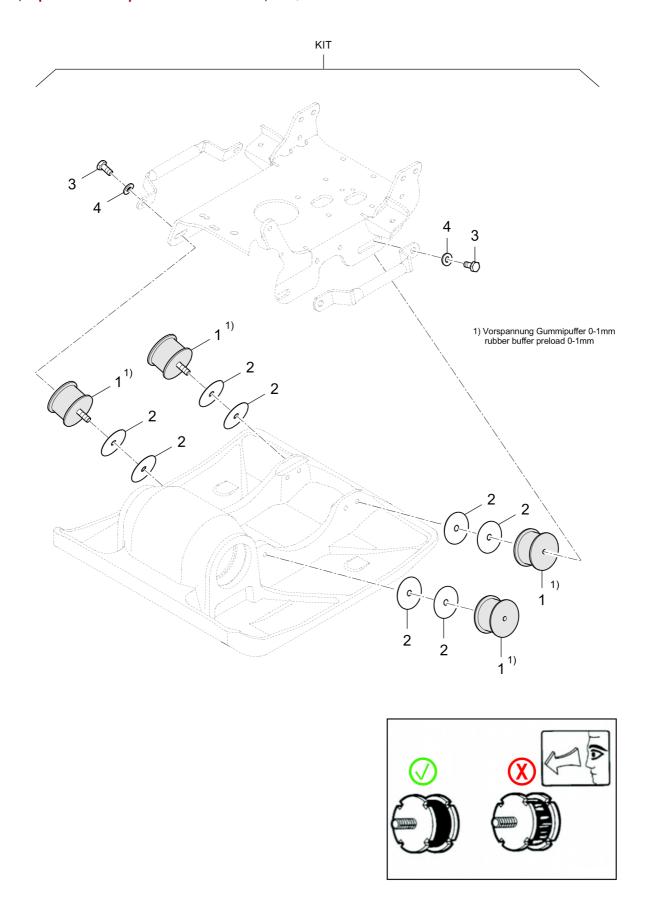


Item	Part No.	Qty	Name	SN INFO
KIT	4812216973	1	Repair kit, shock-absorber	
1	DL06126912	4	Rubber buffer	
2	DL23020117	8	Shim	
3	DL07141020	4	Hexagon bolt	
4	DL08752106	4	Spring washer	

Service, repair and wear part kits 4812216977 Repair kit, transmission

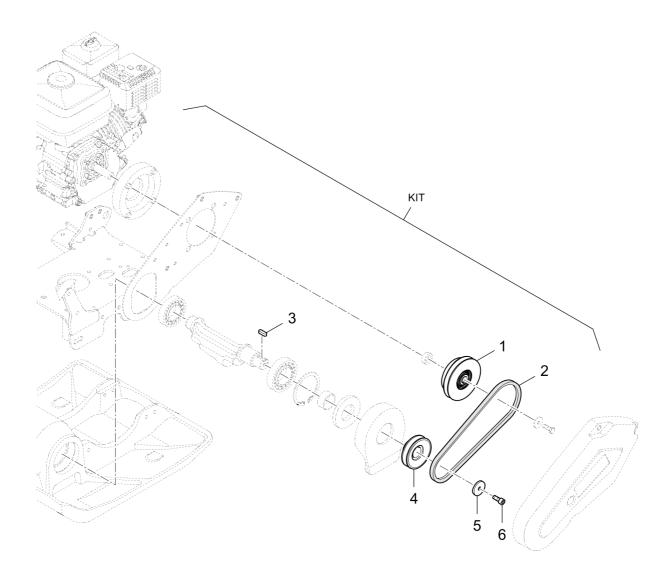


Item	Part No.	Qty	Name	SN INFO
KIT	4812216977	1	Repair kit, transmission	
1	DL05650122	1	Centrifugal clutch	
2	DL92410581	1	V-belt	
3	DL09181604	1	Fitting key	
4	DL23010140	1	V-belt pulley	
5	DL23010132	1	Washer	
6	DL07230819	1	Socket-head cap screw	

Service, repair and wear part kits 4812216981 Repair kit, exciter unit

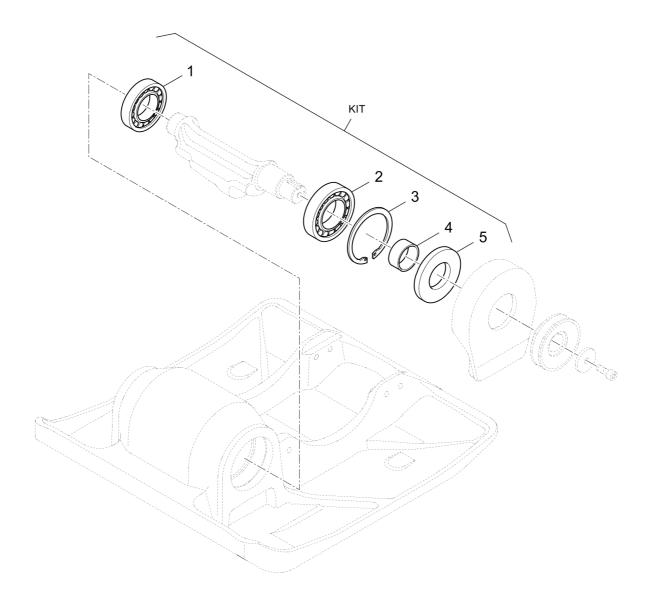

Item	Part No.	Qty	Name	SN INFO
KIT	4812216981	1	Repair kit, exciter unit	
1	DL05224252	1	Cylinder roller bearing	
2	DL05224260	1	Cylinder roller bearing	
3	DL09224400	1	Circlip,internal	
4	DL05428122	1	Inner ring	
5	DL09312808	1	Radial seal	


Service, repair and wear part kits DL92492424\_00 Service kit

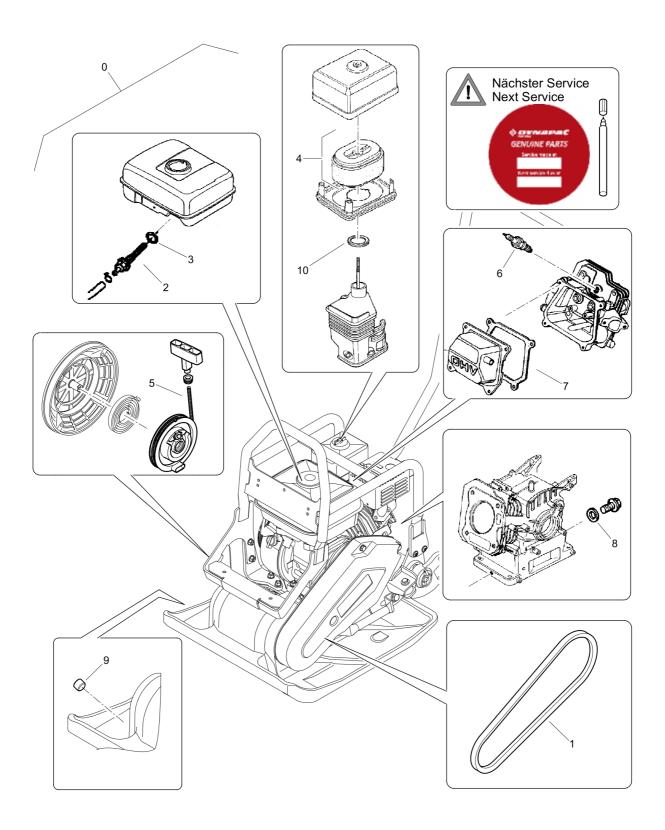

194.08


Item	Part No.	Qty	Name	SN INFO
0	DL92492424	1	Service kit	
1	DL92410581	1	V-belt	
2	DL05747161	1	Filter,fuel	
3	DL05747188	1	Loop ring	
4	DL05747215	1	Element	
5	DL05747296	1	Starter rope	
6	DL05747282	1	Spark plug	
7	DL05747125	1	Valve cover gasket	
8	DL05747129	1	Gasket, oil drain	
9	DL07611616	1	Magnetic plug	
10	DL83403043	1	Gasket	

Refurbishing kits 4812064104 efurbishing kit - covering

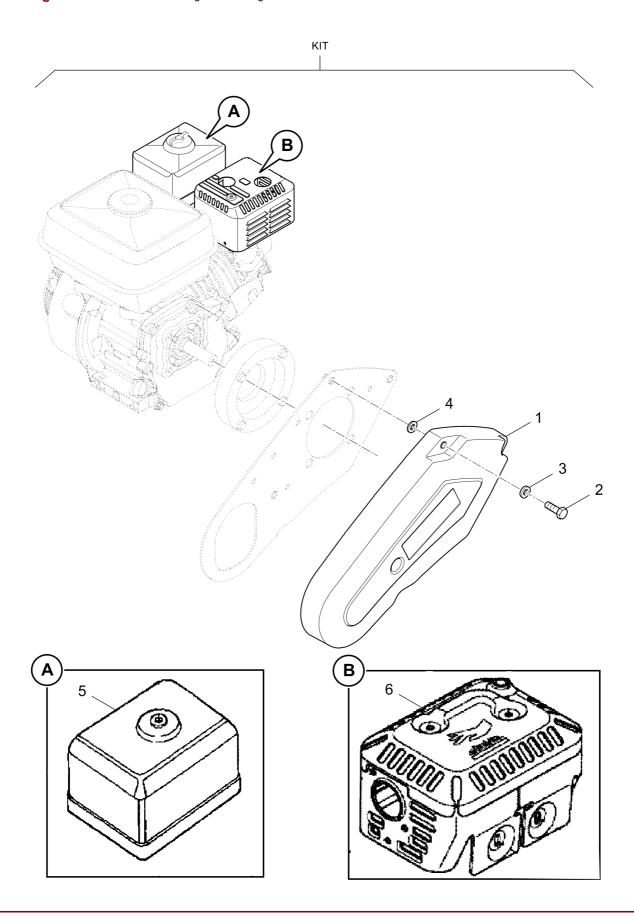


Item	Part No.	Qty	Name	SN INFO
KIT	4812064104	1	Refurbishing kit - covering	
1	DL92410030	1	V-belt guard	
2	DL07140853	3	Hexagon bolt	
3	DL08510817	3	Washer	
4	DL08665000	3	Stop disc	
5	DL05749093	1	Filter cover	
6	DL05749156	1	Muffler guard	

#### Refurbishing kits 4812064106 Refurbishing kit - decals

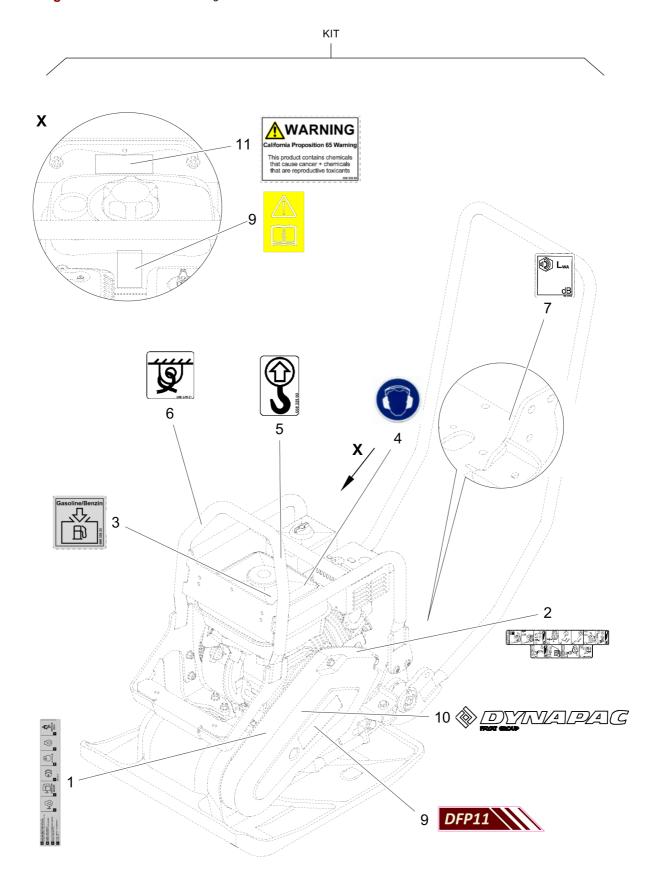


Item	Part No.	Qty	Name	SN INFO
KIT	4812064106	1	Refurbishing kit - decals	
1	DL00833977	1	Decal,maintenance instr.	
2	DL00834125	1	Decal,operation	
3	DL00833833	1	Decal,indication	
4	DL00833226	1	Decal,indication	
5	DL05050358	1	Decal,indication	
6	DL05050359	1	Decal,indication	
7	DL00832654	1	Decal,indication	
8	DL00833653	1	Decal,indication	
9	DL92410405	1	Type designation	
10	DL92410221	1	Decal	
11	DL00833968	1	Warning sign	

Refurbishing kits Color Dynapac-Light

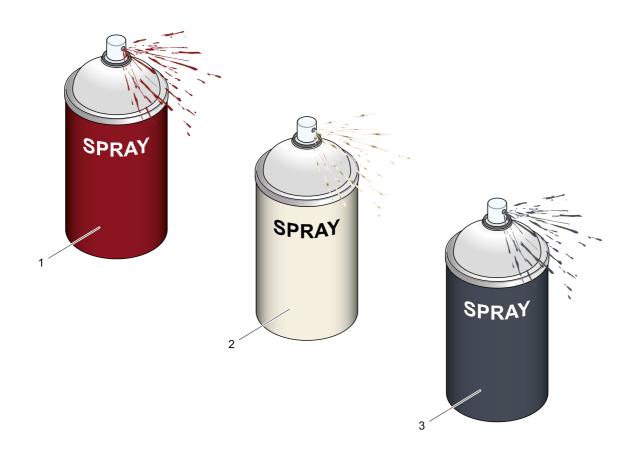


Item	Part No.	Qty	Name	SN INFO
1	4812215512	1	Dynapac color, red	
2	4812215516	1	Dynapac color, white	
3	4812071005	1	Dynapac color, grey	

Field kits DL92401001 X5-Synthetic plate

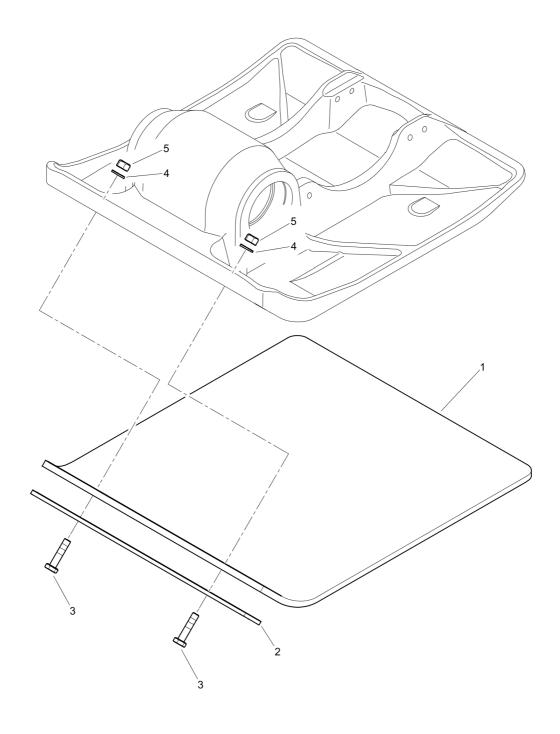

Item	Part No.	Qty	Name	SN INFO
	DL92401001	1	X5-Synthetic plate	
1	DL23003232	1	Plastic plate	
2	DL23003037	1	Supporting plate	
3	DL07141041	2	Hexagon bolt	
4	DL08591025	2	Washer	
5	DL08131016	2	Safety nut	


Field kits DL92401003\_01 Water sprinkler system

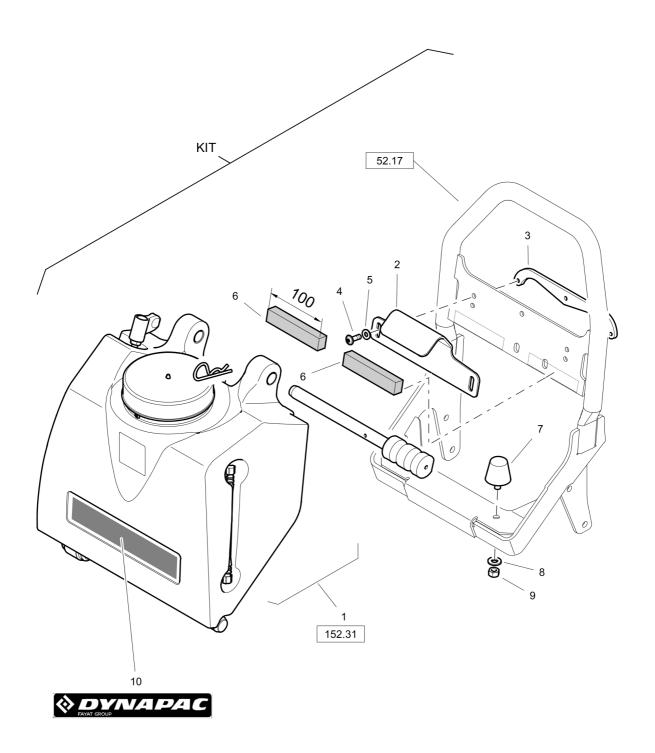

## 152.18


Item	Part No.	Qty	Name	SN INFO
KIT	DL92401003		W1-Water sprinkler system	
1	DL23003471	1	Water tank, assembled	
2	DL23003273	1	Plate	
3	DL23003440	1	Tapped plate	
4	DL07210616	3	Pens head scew	
5	DL08621064	3	Washer	
6	DL00652070	2.00	Expanded rubber	
7	DL06144100	2	Stop buffer	
8	DL08752084	2	Spring washer	
9	DL08130813	2	Safety nut	
10	DL92410189	1	Decal	
52.17	-		Protection Bow	


Field kits DL92401005 T90-Transport wheels, mid bow

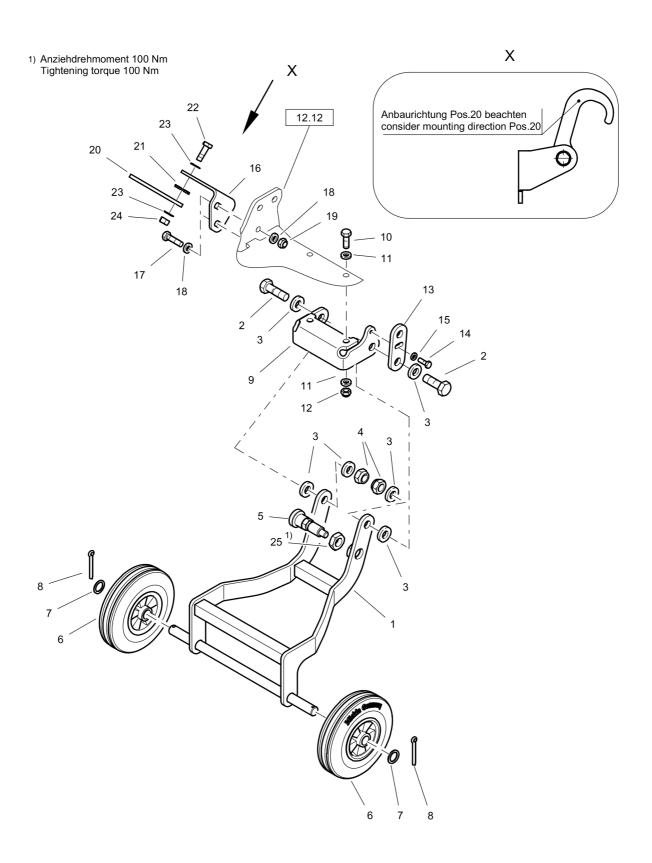

Item	Part No.	Qty	Name	SN INFO
	DL92401005	1	T90-Transport wheels,mid bow	
1	DL23003314	1	Frame	
2	DL07141242	2	Hexagon bolt	
3	DL08511324	6	Washer	
4	DL08131218	2	Safety nut	
5	DL06422046	1	Control pin	
6	DL06704107	2	Wheel	
7	DL05520315	2	Supporting disc	
8	DL09170407	2	Cotter pin	
9	DL23003248	1	Holder	
10	DL07140834	2	Hexagon bolt	
11	DL08510817	4	Washer	
12	DL08130813	2	Safety nut	
13	DL23003354	1	Detent	
14	DL07140626	1	Hexagon bolt	
15	DL08590617	1	Washer	
16	DL23003460	1	Holder	
17	DL07140834	2	Hexagon bolt	
18	DL08510817	4	Washer	
19	DL08130813	2	Safety nut	
20	DL23003455	1	Hook	
21	DL68050213	1	Washer	
22	DL07140834	1	Hexagon bolt	
23	DL09290169	2	Belleville spring	
24	DL08130813	1	Safety nut	
25	DL08141615	1	Hexagon nut	
12.12	-		Engine Carrier	


Field kits DL92401040\_00 T1-Transport wheels

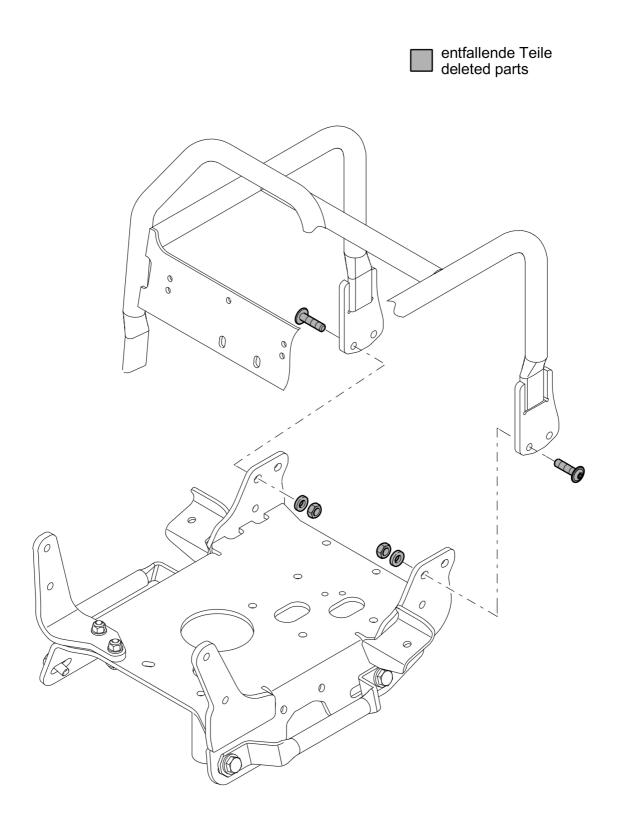


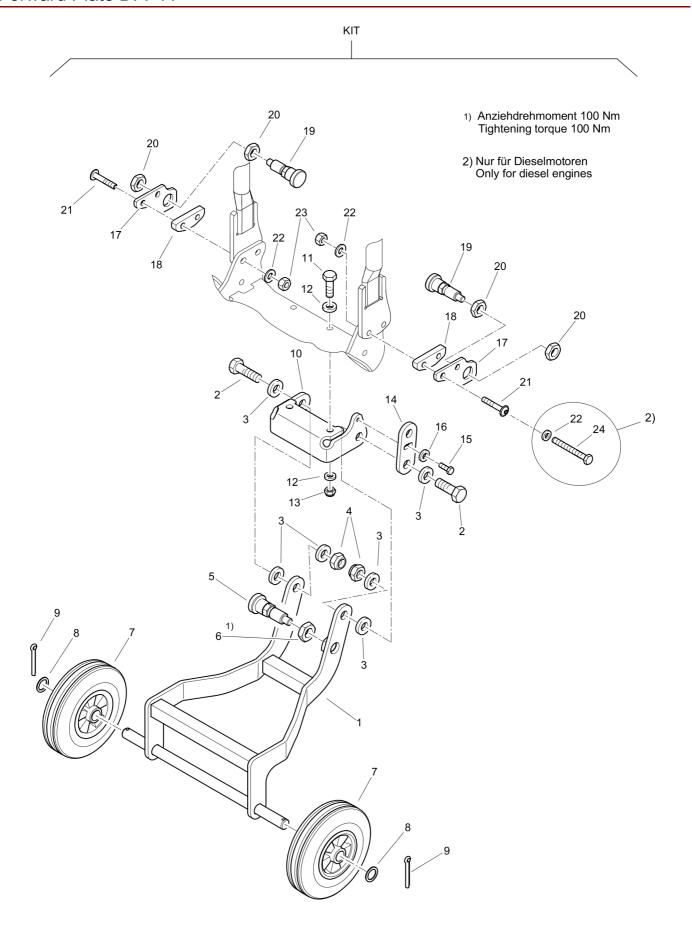

Item	Part No.	Qty	Name	SN INFO
KIT	DL92401040		T1-Transport wheels	
1	DL23003314	1	Frame	
2	DL07141242	2	Hexagon bolt	
3	DL08511324	6	Washer	
4	DL08131218	2	Safety nut	
5	DL06422046	1	Control pin	
6	DL08141615	1	Hexagon nut	
7	DL06704107	2	Wheel	
8	DL05520315	2	Supporting disc	
9	DL09170407	2	Cotter pin	
10	DL23003248	1	Holder	
11	DL07140834	2	Hexagon bolt	
12	DL08510817	4	Washer	
13	DL08130813	2	Safety nut	
14	DL23003354	1	Detent	
15	DL07140626	1	Hexagon bolt	
16	DL08590617	1	Washer	
17	DL23003479	2	Plate	
18	DL23003480	2	Plate	
19	DL06422046	2	Control pin	
20	DL08141615	4	Hexagon nut	
21	DL07210820	4	Pens head screw	
22	DL08510817	5	Washer	
23	DL08130813	4	Safety nut	
24	DL07140899	1	Hexagon bolt	


Field kits DL92401044\_00 L15-Steering handle, Middle

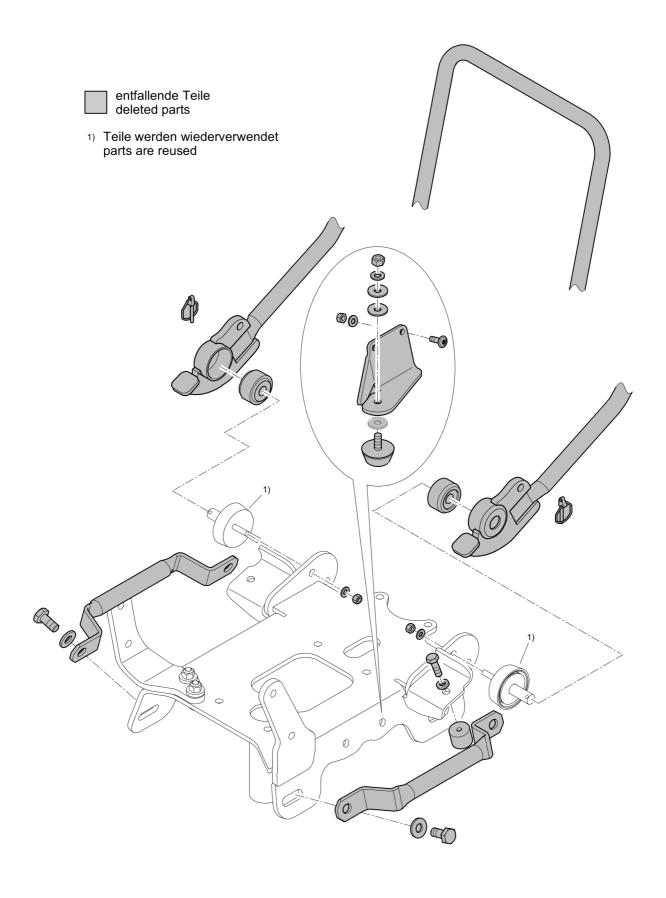


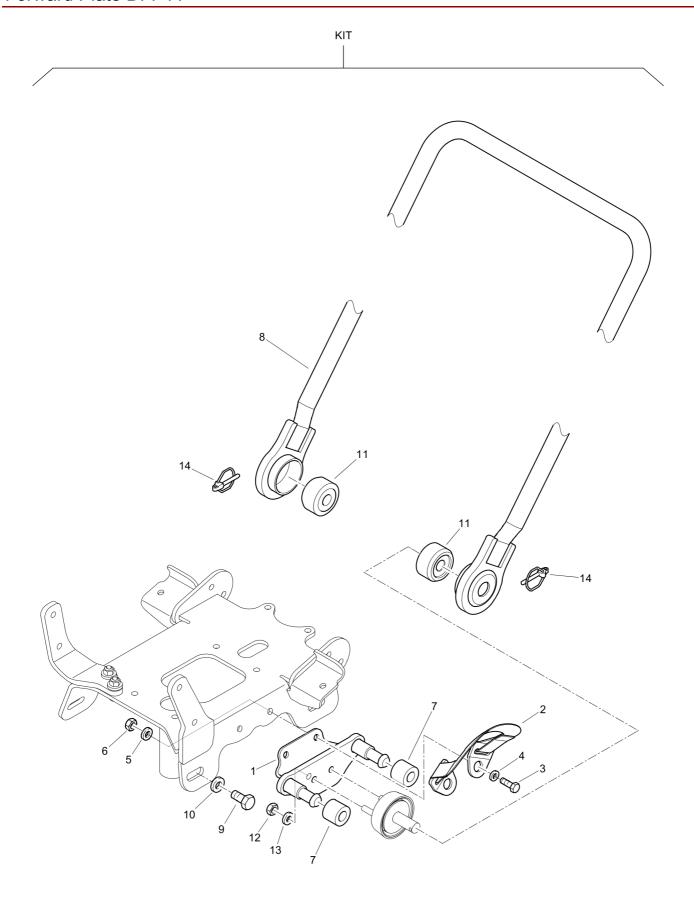

Item	Part No.	Qty	Name	SN INFO
KIT	DL92401044	1	Steering handle, Middle	
1	DL23003484	2	Holder	
2	DL88003146	2	Band, belt	
3	DL07140842	4	Hexagon bolt	
4	DL08500823	4	Round anchor plate	
5	DL08510817	4	Washer	
6	DL08130813	4	Safety nut	
7	DL23060325	4	Buffer	
8	DL23003422	1	Steering handle	
9	DL07141017	4	Hexagon bolt	
10	DL08501028	4	Washer	
11	DL23003476	2	Bushing	
12	DL08110813	4	Hexangon nut	
13	DL08510817	4	Washer	
14	DL05931600	2	Linch pin	


Field kits DL92401045\_00 L20-Comfort handle,middle

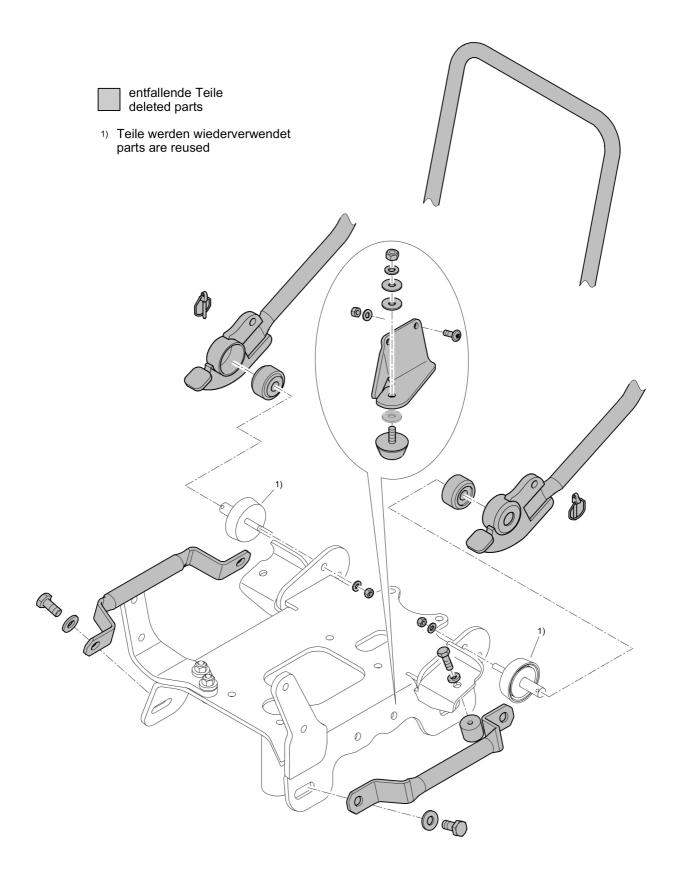

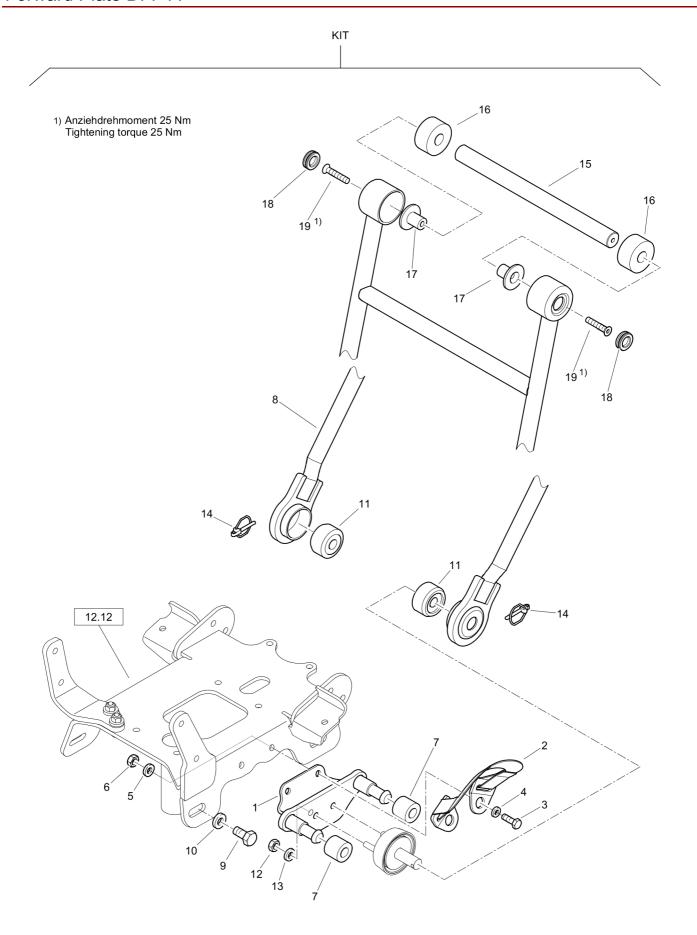


Item	Part No.	Qty	Name	SN INFO
KIT	DL92401045	1	L20-Comfort handle,middle	
1	DL23003484	2	Holder	
2	DL88003146	2	Band, belt	
3	DL07140842	4	Hexagon bolt	
4	DL08500823	4	Round anchor plate	
5	DL08510817	4	Washer	
6	DL08130813	4	Safety nut	
7	DL23060325	4	Buffer	
8	DL23003425	1	Steering handle	
9	DL07141017	4	Hexagon bolt	
10	DL08501028	4	Washer	
11	DL23003476	2	Bushing	
12	DL08110813	4	Hexangon nut	
13	DL08510817	4	Washer	
14	DL05931600	2	Linch pin	
15	DL23003428	1	Shaft	
16	DL23060282	2	Expanded rubber	
17	DL23060283	2	Stop	
18	DL05756120	2	Wall duct	
19	DL07320829	2	Countersunk screw	


**Lubricants** Lubricants and operating substances

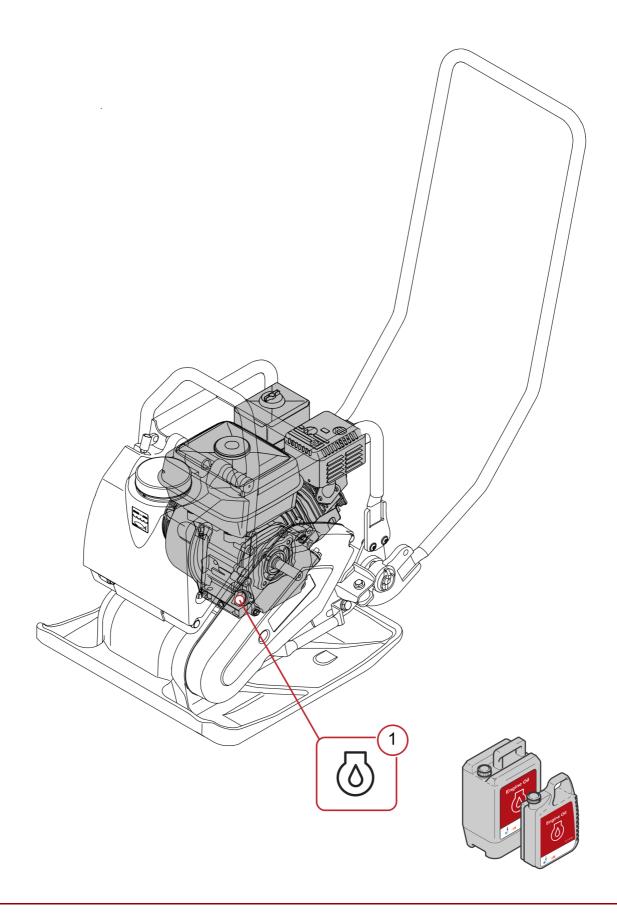

Item	Part No.	Qty	Name	SN INFO
1	4812074488	1	Dynapac engine oil 5 ltr	
1	4812074490	1	Dynapac engine oil 20 ltr.	

**10 Engine** DL92400024\_00\_010\_DFP11-32 Engine / Fitting Parts

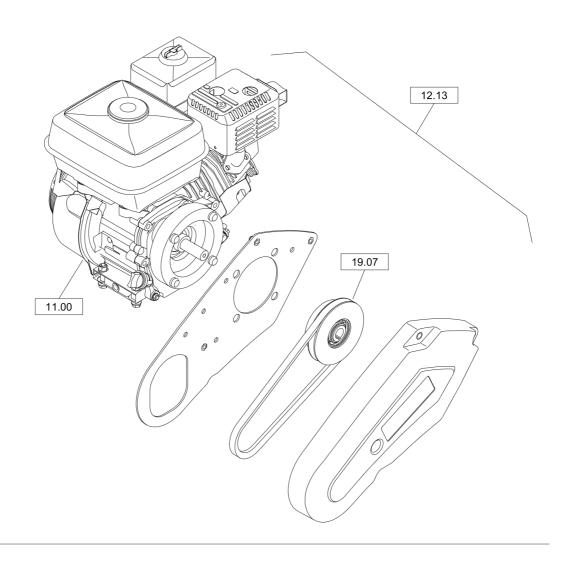

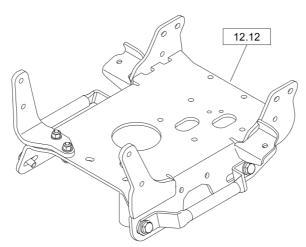

Item	Part No.	Qty	Name	SN INFO
11.00	DL05747063_100 1E		Engine Parts List	
11.01	DLMOT023496_0		Crankcase	
11.02	DLMOT023497_0 0		Front Cover	
11.08	DLMOT023498_0		Cylinder Head	
11.21	DLMOT023499_0		Fuel Tank	
11.22	DLMOT023500_0		Dry Air Filter	
11.25	DLMOT023501_0		Throttle Control	
11.26	DLMOT023502_0		Silencer	
11.29	DLMOT023503_0		Cooling Blower	
11.31	DLMOT023504_0		Recoil Starter	
11.44	DLMOT023505_0		Covering	
11.46	DLMOT023506_0		Contact Breaker/Ign.Coil	
11.53	DLMOT023507_0		Carburetor	
12.12	DL92410076_00		Engine Carrier	
12.13	DL92410838_00		Engine	
19.07	DLEA002910_00		Centrifugal Clutch	


Engine / Fitting Parts DL05747063\_1001E Engine Parts List



**♦ DYNAPAC** 


Item	Part No.	Qty	Name	SN INFO
1	DL05747063	1	Four-stroke engine	

#### Engine / Fitting Parts DLMOT023496\_00 Crankcase

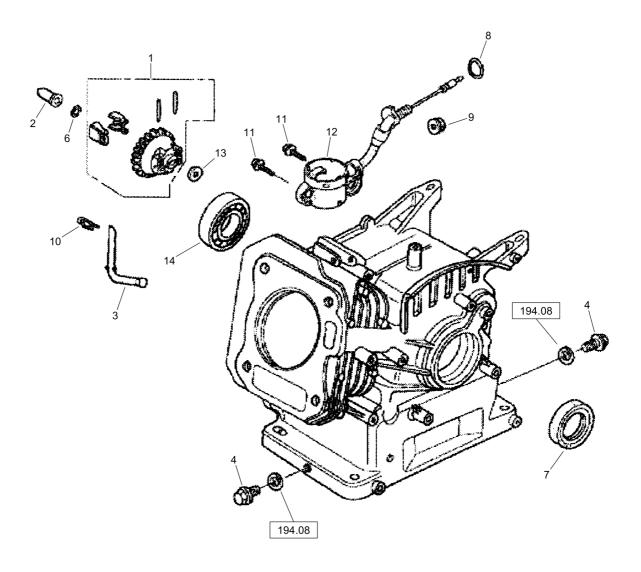

Item	Part No.	Qty	Name	SN INFO
1	DL05748950	1	Governor / controller	
2	DL05748953	1	Spool valve	
3	DL05748954	1	Shaft,governor	
4	DL05747180	2	Drain plug	
6	DL05747377	1	Spring ring	
7	DL05748553	1	Radial seal	
8	DL05747188	1	Loop ring	
9	DL05747379	1	Collar nut	
10	DL05747349	1	Spring cotter	
11	DL05747380	2	Screw	
12	DL05748599	1	Oil pressure switch	
13	DL05747348	1	Washer	
14	DL05749091	1	Ball bearing,grooved	
194.08	PNNA		Service kit	


Engine / Fitting Parts DLMOT023497\_00 Front Cover

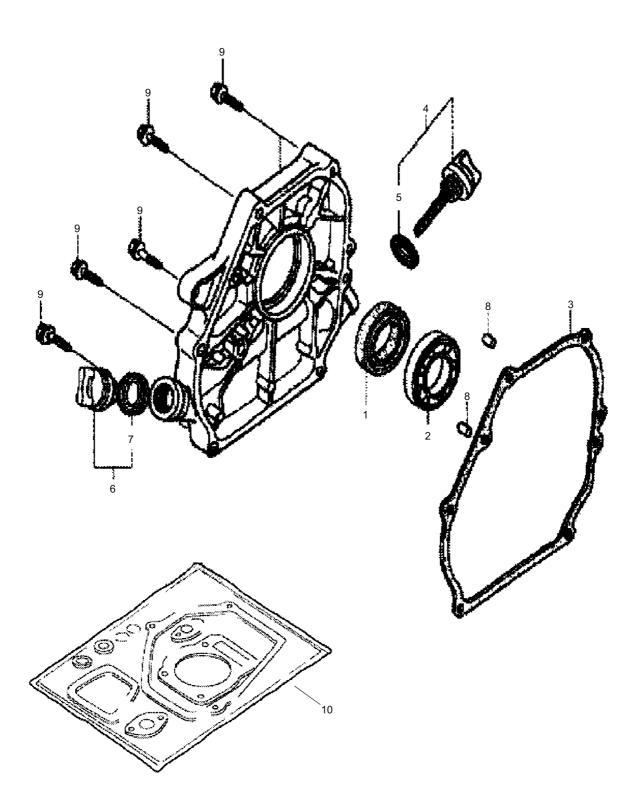

11.02


Item	Part No.	Qty	Name	SN INFO
1	DL05748553	1	Radial seal	
2	DL05114005	1	Ball bearing,grooved	
3	DL05747221	1	Gasket,crankcase	
4	DL05748601	1	Filler cap	
5	DL05748603	1	Gasket, oil dip stick	
6	DL05748602	1	Filler cap	
7	DL05748603	1	Gasket, oil dip stick	
8	DL05747389	2	Dowel pin	
9	DL05747390	6	Screw	
10	DL05749099	1	Engine gasket set	

Engine / Fitting Parts DLMOT023498\_00 Cylinder Head

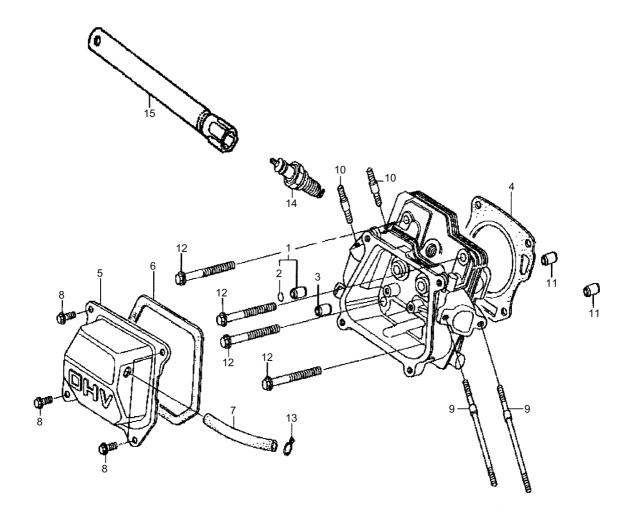


Item	Part No.	Qty	Name	SN INFO
1	DL05747212	1	Valve guide	
2	DL05747368	1	Circlip	
3	DL05747211	1	Valve guide	
4	DL05748941	1	Cylinder head gasket	
5	DL05749013	1	Cylinder head cover	
6	DL05747125	1	Valve cover gasket	
7	DL05747369	1	Ventilation pipe	
8	DL05747322	4	Hexagon bolt	
9	DL05747356	2	Stud	
10	DL05747370	2	Stud	
11	DL05747371	2	Dowel pin	
12	DL05748639	4	Hexagon bolt	
13	DL05748558	2	Hose clip	
14	DL05747282	1	Spark plug	
15	DL05748608	1	Spark plug spanner	

Engine / Fitting Parts DLMOT023499\_00 Fuel Tank

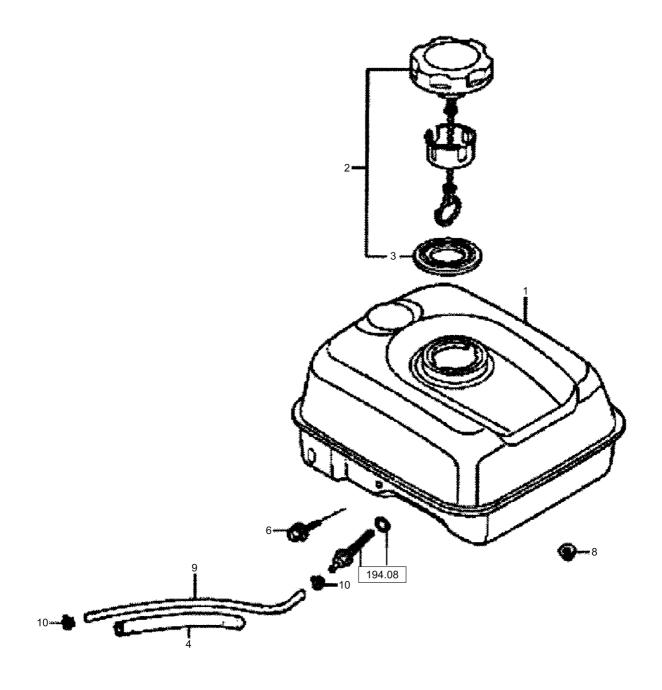


Item	Part No.	Qty	Name	SN INFO
1	DL05749092	1	Fuel tank	
2	DL05748592	1	Tank cover	
3	DL05748593	1	Gasket, tank cover	
4	DL05747464	1	Rubber,supporter	
6	DL05748568	1	Hexagon bolt	
8	DL05747312	2	Collar nut	
9	DL05748937	1	Fuel hose	
10	DL05748570	2	Hose clip	
194.08	PNNA		Service kit	

Engine / Fitting Parts DLMOT023500\_00 Dry Air Filter

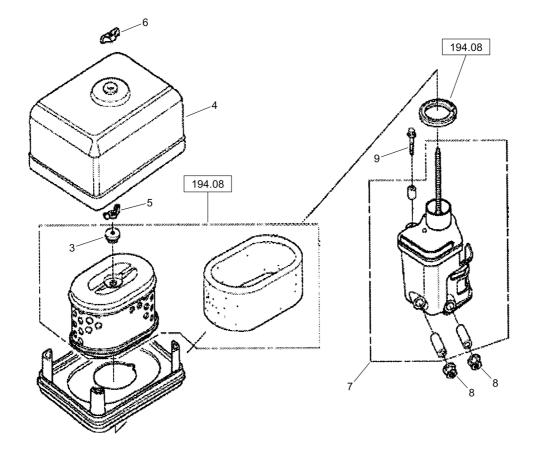


Item	Part No.	Qty	Name	SN INFO
3	DL05749094	1	Rubber grommet	
4	DL05749093	1	Filter cover	
5	DL05749096	2	Wing nut	
6	DL05748909	1	Wing nut	
7	DL05749095	1	Knuckle tube	
8	DL05747312	2	Collar nut	
9	DL05747452	1	Screw	
194.08	PNNA		Service kit	

Engine / Fitting Parts DLMOT023501\_00 Throttle Control

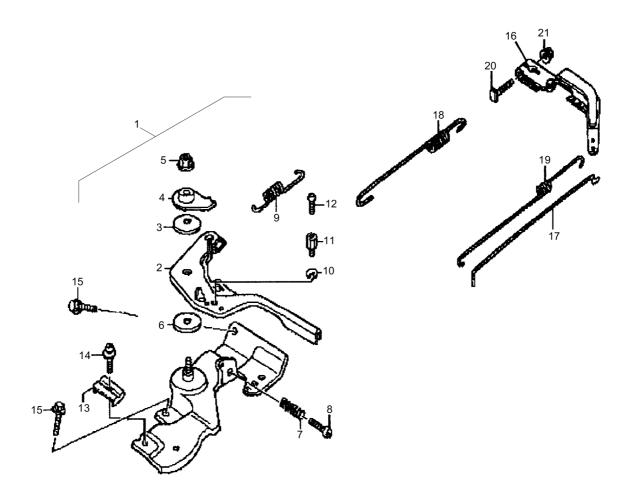


Item	Part No.	Qty	Name	SN INFO
1	DL05749097	1	Control assy.	
2	DL05748947	1	Lever,control	
3	DL05747227	1	Belleville spring	
4	DL05747155	1	Washer	
5	DL05747264	1	Safety nut	
6	DL05747156	1	Connecting piece	
7	DL05747158	1	Adjusting spring	
8	DL05747425	1	Screw	
9	DL05747341	1	Return spring	
10	DL05747333	1	Spring ring	
11	DL05747332	1	Wire holder	
12	DL05747334	1	Screw	
13	DL05747418	1	Cable clip	
14	DL05747426	1	Screw	
15	DL05747322	2	Hexagon bolt	
16	DL05748943	1	Arm governor	
17	DL05748944	1	Governor rod	
18	DL05748945	1	Governor spring	
19	DL05747246	1	Return spring	
20	DL05748997	1	Screw	
21	DL05747312	1	Collar nut	

#### Engine / Fitting Parts DLMOT023502\_00 Silencer

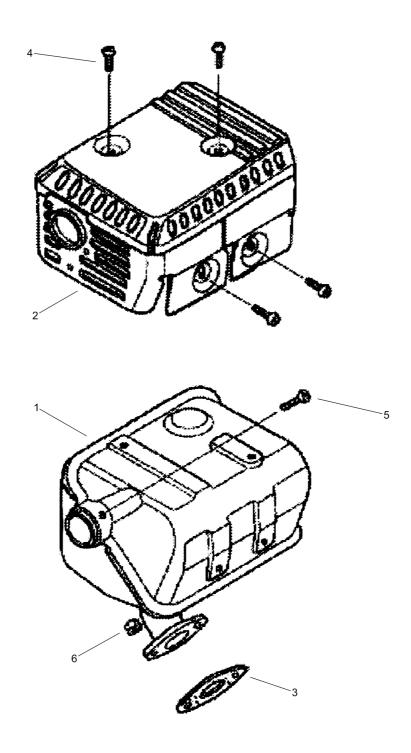


Item	Part No.	Qty	Name	SN INFO
1	DL05742127	1	Silencer	
2	DL05749156	1	Muffler guard	
3	DL05748624	1	Exhaust gasket	
4	DL05747316	4	Self tapping screw	
5	DL05747317	1	Self tapping screw	
6	DL05747190	2	Hexagon nut	

Engine / Fitting Parts DLMOT023503\_00 Cooling Blower

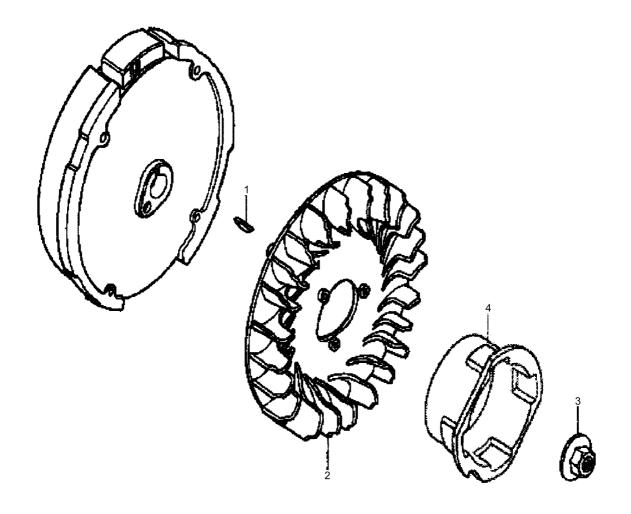


Item	Part No.	Qty	Name	SN INFO
1	DL05747191	1	Woodruff key	
2	DL05747228	1	Fan	
3	DL05748622	1	Collar nut	
4	DL05749001	1	Starting pulley	

Engine / Fitting Parts DLMOT023504\_00 Recoil Starter

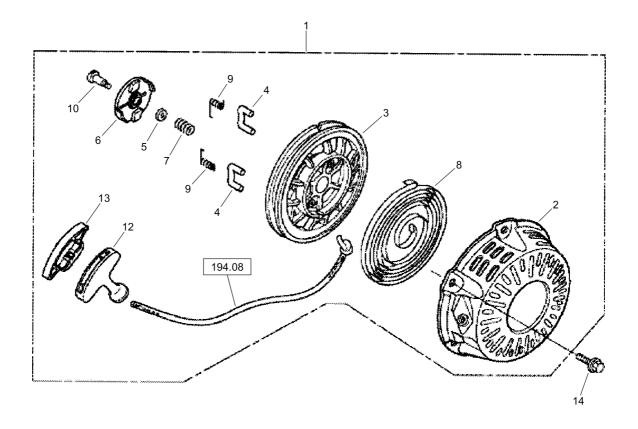


Item	Part No.	Qty	Name	SN INFO
1	DL05749000	1	Recoil starter	
2	DL05748893	1	Starter housing	
3	DL05749006	1	Rope pulley	
4	DL05749007	2	Ratchet	
5	DL05748327	1	Friction spring	
6	DL05749008	1	Guide,ratchet	
7	DL05748329	1	Spring	
8	DL05747293	1	Return spring	
9	DL05749009	2	Return spring	
10	DL05748579	1	Locking screw	
12	DL05748895	1	Starter handle	
13	DL05748896	1	Handle	
14	DL05747318	3	Screw	
194.08	PNNA		Service kit	

Engine / Fitting Parts DLMOT023505\_00 Covering

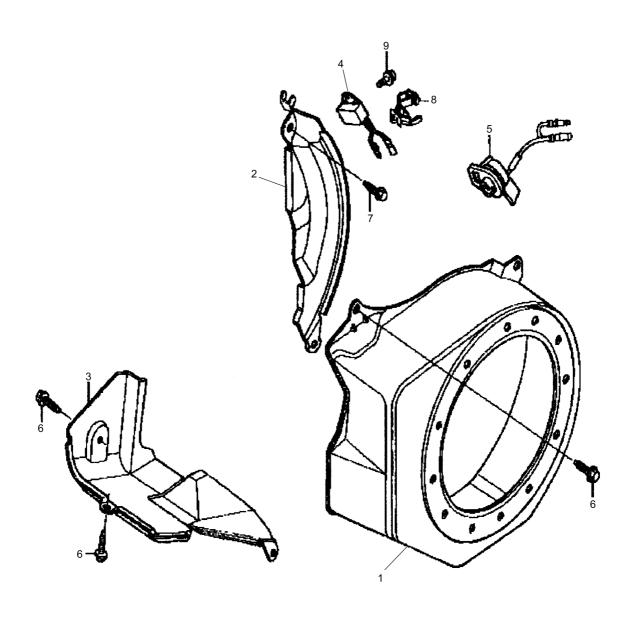


Item	Part No.	Qty	Name	SN INFO
1	DL05748925	1	Engine cover	
2	DL05748926	1	Side plate	
3	DL05749010	1	Cover	
4	DL05748627	1	Oil alarm unit	
5	DL05748628	1	Engine stop switch	
6	DL05747322	6	Hexagon bolt	
7	DL05747325	1	Screw	
8	DL05747648	1	Cable clip	
9	DL05747318	1	Screw	

Engine / Fitting Parts DLMOT023506\_00 Contact Breaker/Ign.Coil

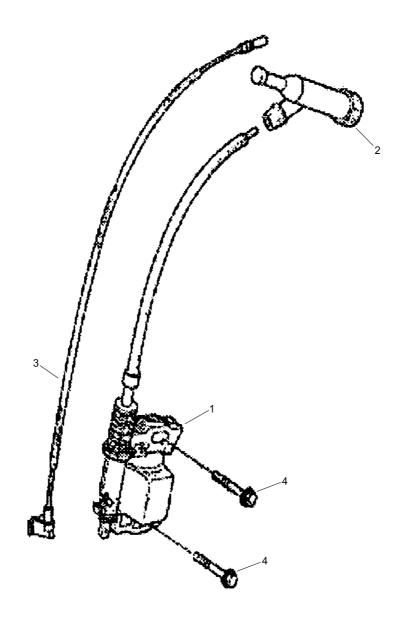


Item	Part No.	Qty	Name	SN INFO
1	DL05749098	1	Coil,ignition	
2	DL05748631	1	Spark plug socket	
3	DL05747415	1	Shut down rope	
4	DL05747395	2	Screw	

Engine / Fitting Parts DLMOT023507\_00 Carburetor

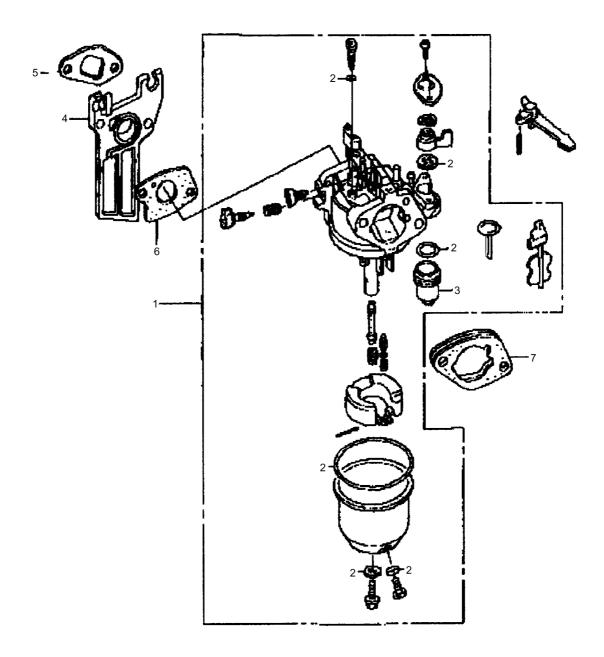


Item	Part No.	Qty	Name	SN INFO
1	DL05749449	1	Carburetor	
2	DL05749450	1	>Kit,seal	
3	DL05747313	1	Cup,fuel strainer	
4	DL05749016	1	Insulator	
5	DL05747342	1	Insulator gasket	
6	DL05747440	1	Gasket, carburetor	
7	DL05747149	1	Connecting piece	

Engine / Fitting Parts DL92410076\_00 Engine Carrier

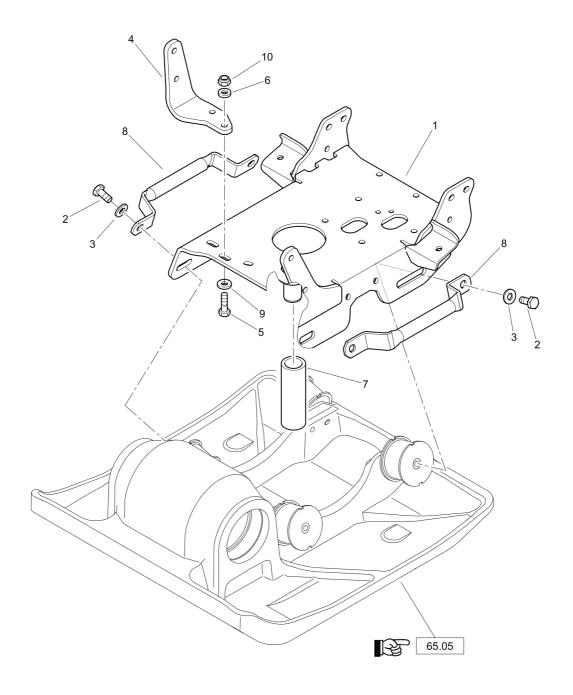


Item	Part No.	Qty	Name	SN INFO
1	DL23030223	1	Engine carrier	
2	DL07141020	4	Hexagon bolt	
3	DL08752106	4	Spring washer	
4	DL23030173	1	Holder	
5	DL07140842	2	Hexagon bolt	
6	DL08510817	2	Washer	
7	DL23030205	1	Stop	DFP11 - from 101924241001 to 101924241036
7	DL23030229	1	Stop	DFP11 - from 101924241037 ff.
8	DL23030176	2	Carrying handle	
9	DL08590820	2	Washer	
10	DL08130813	2	Safety nut	
65.05	-		Base Plate	

#### Engine / Fitting Parts DL92410838\_00 Engine

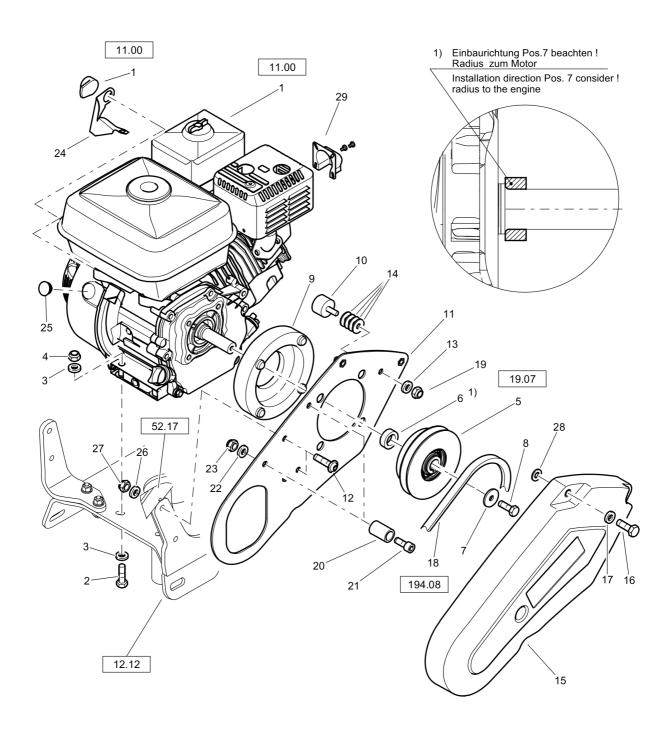


Item	Part No.	Qty	Name	SN INFO
1	DL05747063	1	Four-stroke engine	
2	DL07140848	4	Hexagon bolt	
3	DL08510817	8	Washer	
4	DL08130813	4	Safety nut	
5	DL05650122	1	Centrifugal clutch	
6	DL23040112	1	Spacer sleeve	
7	DL23040137	1	Washer	
8	DL07010816	1	Hexagon bolt	
9	DL23040106	1	Seal	
10	DL06142915	1	Stop buffer	
11	DL23040153	1	Supporting plate	
12	DL07210817	2	Pens head screw	
13	DL08510817	1	Washer	
14	DL08621084	4	Washer	
15	DL92410030	1	V-belt guard	
16	DL07140853	3	Hexagon bolt	
17	DL08510817	3	Washer	
18	DL92410581	1	V-belt	
19	DL08130813	1	Safety nut	
20	DL69020718	2	Stop	
21	DL07230819	2	Socket-head cap screw	
22	DL08510817	2	Washer	
23	DL08130813	2	Safety nut	
24	DL23040147	1	Supporting plate	
25	DL06510213	1	Plug	
26	DL08510817	2	Washer	
27	DL08130813	2	Safety nut	
28	DL08665000	3	Stop disc	
29	DL05749153	1	Exhaust gas eflector	
12.12	-		Engine Carrier	
194.08	-		Service kit	


Engine / Fitting Parts DLEA002910\_00 Centrifugal Clutch

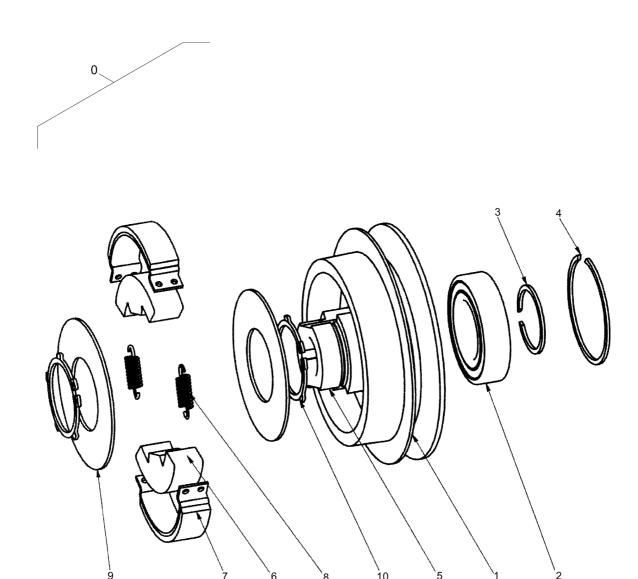

Item	Part No.	Qty	Name	SN INFO
0	DL05650122	1	Centrifugal clutch	
1	DL05660548	1	Belt pulley	
2	DL05113306	1	Ball bearing,grooved	
3	DL05660215	1	Spring ring	
4	DL05660777	1	Circlip	
5	DL05660459	1	Hub	
6	DL05660214	2	Centrifugal weight	
7	DL05660174	2	Support with lining	
8	DL05660366	4	Tension spring	
9	DL05660134	2	Cover disc	
10	DL05660807	2	Circlip,external	

**50 Frame** DL92500026\_00\_050\_DFP11-32 Frame with Attachment Parts

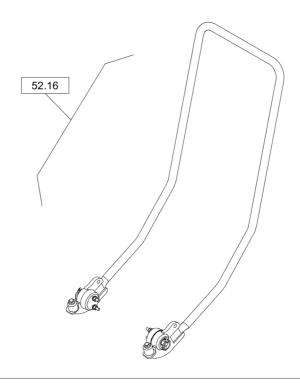


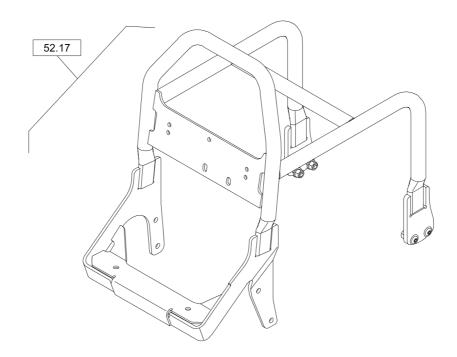

**♦ DYNAPAC** 


Item	Part No.	Qty	Name	SN INFO
52.16	DL23060047_00		Steering Handle	


Frame with Attachment Parts DL23060047\_00 Steering Handle

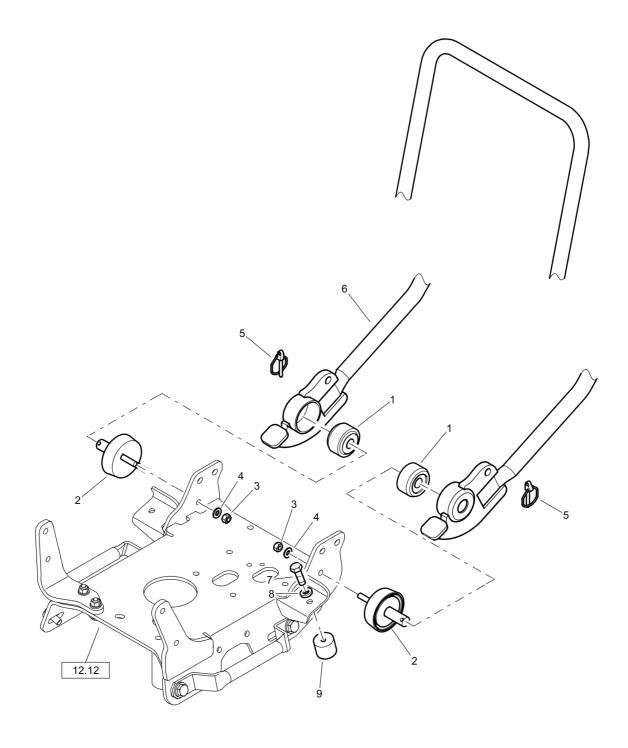

Item	Part No.	Qty	Name	SN INFO
1	DL23003476	2	Bushing	
2	DL23003475	2	Spring element	
3	DL08130813	4	Safety nut	
4	DL08510817	4	Washer	
5	DL05931600	2	Linch pin	
6	DL23060280	1	Steering handle	
7	DL07140818	2	Hexagon bolt	
8	DL08590820	2	Washer	
9	DL06142912	2	Stop buffer	
12.12	-		Engine Carrier	

65 Plate DL92400024\_00\_065\_DFP11-32 Plate / Foot

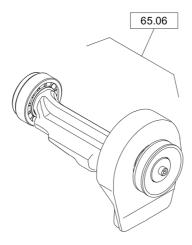


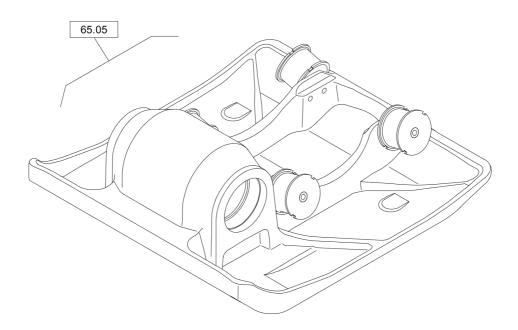

Item	Part No.	Qty	Name	SN INFO
65.05	DL23020007_01		Base Plate	
65.06	DL23010002_01		Exciter Unit	


Plate / Foot DL23020007\_01 Base Plate

1) Vorspannung Gummipuffer 0-1mm rubber buffer preload 0-1mm

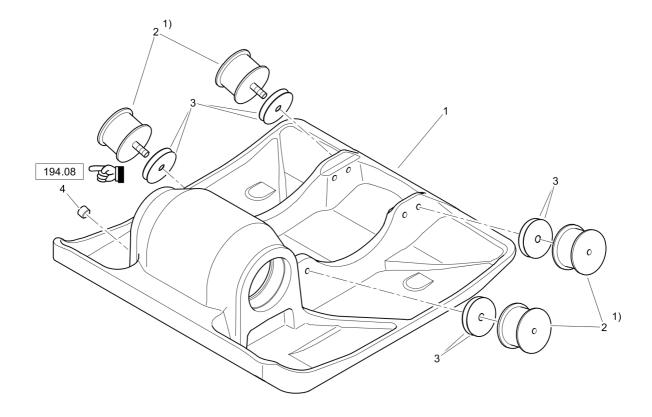

Item	Part No.	Qty	Name	SN INFO
1	DL23020146	1	Base plate	
2	DL06126912	4	Rubber buffer	
3	DL23020117	8	Shim	
4	DL07611616	1	Magnetic plug	
194.08	-		Service kit	

Plate / Foot DL23010002\_01 Exciter Unit

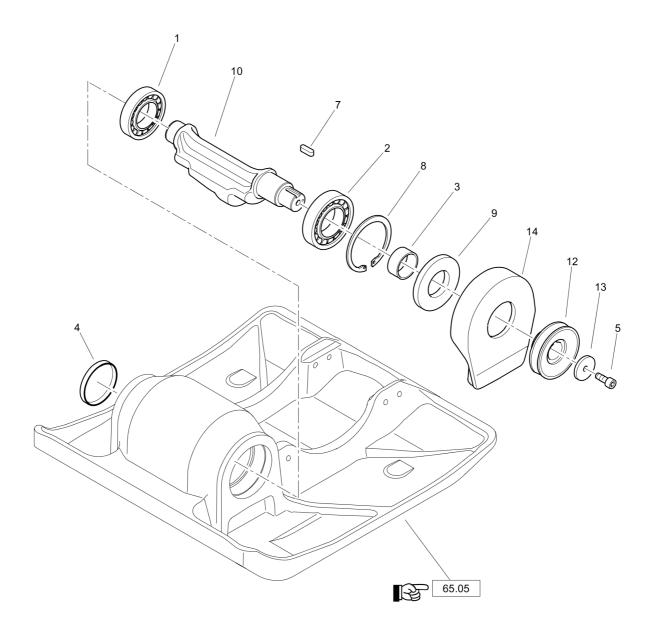

Item	Part No.	Qty	Name	SN INFO
1	DL05224252	1	Cylinder roller bearing	
2	DL05224260	1	Cylinder roller bearing	
3	DL05428122	1	Inner ring	
4	DL06510380	1	Locking cap	
5	DL07230819	1	Socket-head cap screw	
7	DL09181604	1	Fitting key	
8	DL09224400	1	Circlip,internal	
9	DL09312808	1	Radial seal	
10	DL23010161	1	Exciter shaft	
12	DL23010140	1	V-belt pulley	
13	DL23010132	1	Washer	
14	DL23010156	1	Seal	
65.05	-		Base Plate	

100 Accessories DL92400004\_00\_100\_DFP11-32 Accessories






**♦ DYNAPAC** 


Item	Part No.	Qty	Name	SN INFO
101.03	DL92410914_00		Decals	

Accessories DL92410914\_00 Decals

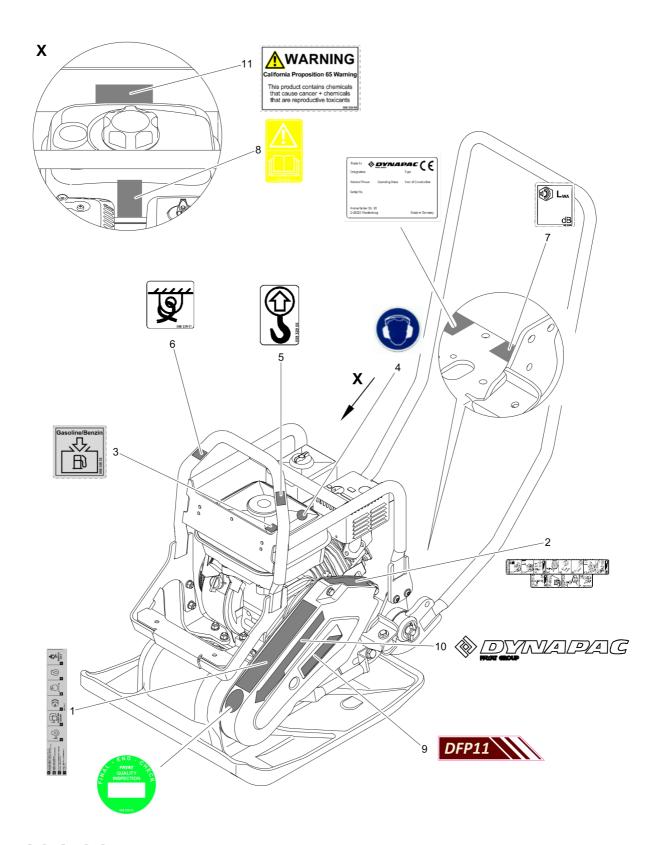


Item	Part No.	Qty	Name	SN INFO
1	DL00833977	1	Decal,maintenance instr.	
2	DL00834125	1	Decal,operation	
3	DL00833833	1	Decal,indication	
4	DL00833226	1	Decal,indication	
5	DL05050358	1	Decal,indication	
6	DL05050359	1	Decal,indication	
7	DL00832654	1	Decal,indication	
8	DL00833653	1	Decal,indication	
9	DL92410405	1	Type designation	
10	DL00833968	1	Warning sign	
11	DL92410221	1	Decal	

110 Options DL92500026\_00\_110\_DFP11-32 Special Equipment

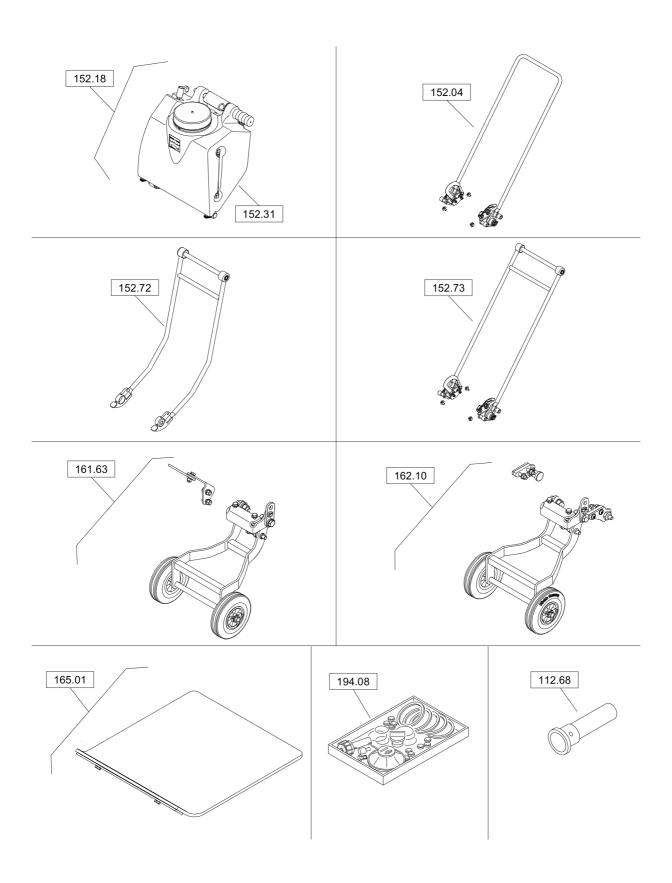

Item	Part No.	Qty	Name	SN INFO
152.04	DL23000216_00		L15-Steering handle, Middle	
152.18	DL92400104_01		W1-Water sprinkler system	
152.31	DL23003471_00		Water tank, assembled	
152.72	DL23000214_00		L19-Comfort handle	
152.73	DL23000218_00		L20-Comfort handle,middle	
161.63	DL23000614_01		T90-Transport wheels,mid bow	
162.10	DL23000616_00		T1-Transport wheels	
194.08	DL92492424_00		Service kit	


Special Equipment DL23000216\_00 L15-Steering handle, Middle

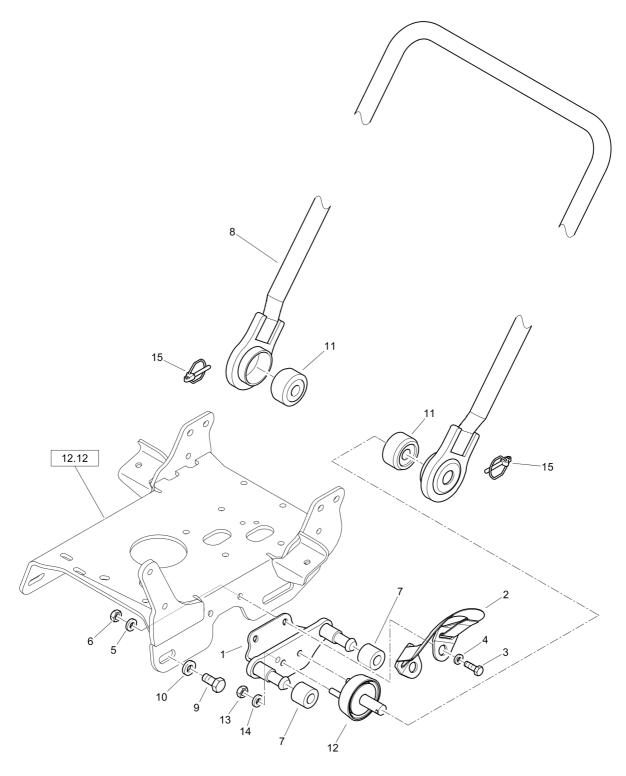

152.04


Item	Part No.	Qty	Name	SN INFO
1	DL23003484	2	Holder	
2	DL88003146	2	Band, belt	
3	DL07140842	4	Hexagon bolt	
4	DL08500823	4	Round anchor plate	
5	DL08510817	4	Washer	
6	DL08130813	4	Safety nut	
7	DL23060325	4	Buffer	
8	DL23003422	1	Steering handle	
9	DL07141017	4	Hexagon bolt	
10	DL08501028	4	Washer	
11	DL23003476	2	Bushing	
12	DL23003475	2	Spring element	
13	DL08130813	4	Safety nut	
14	DL08510817	4	Washer	
15	DL05931600	2	Linch pin	
12.12	-		Engine Carrier	

**Special Equipment** DL92400104\_01 W1-Water sprinkler system

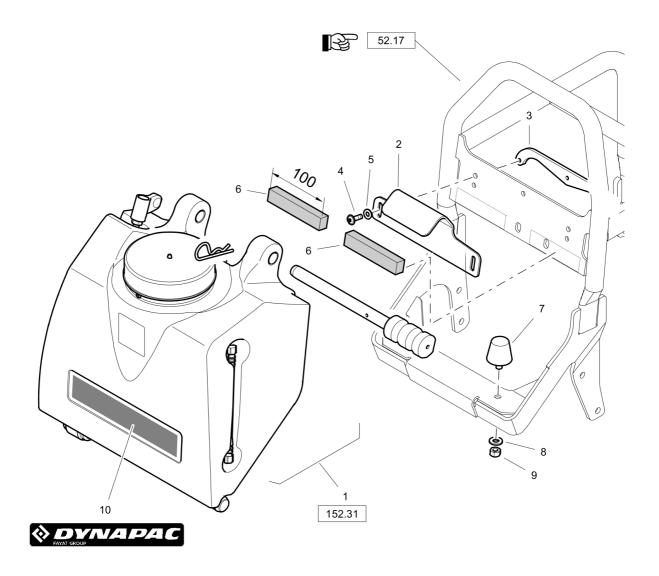


Item	Part No.	Qty	Name	SN INFO
1	DL23003471	1	Water tank, assembled	
2	DL23003273	1	Plate	
3	DL23003440	1	Tapped plate	
4	DL07210616	3	Pens head scew	
5	DL08621064	3	Washer	
6	DL00652070	2.00	Expanded rubber	
7	DL06144100	2	Stop buffer	
8	DL08752084	2	Spring washer	
9	DL08130813	2	Safety nut	
10	DL92410189	1	Decal	
52.17	-		Protection Bow	

Special Equipment DL23003471\_00 Water tank, assembled

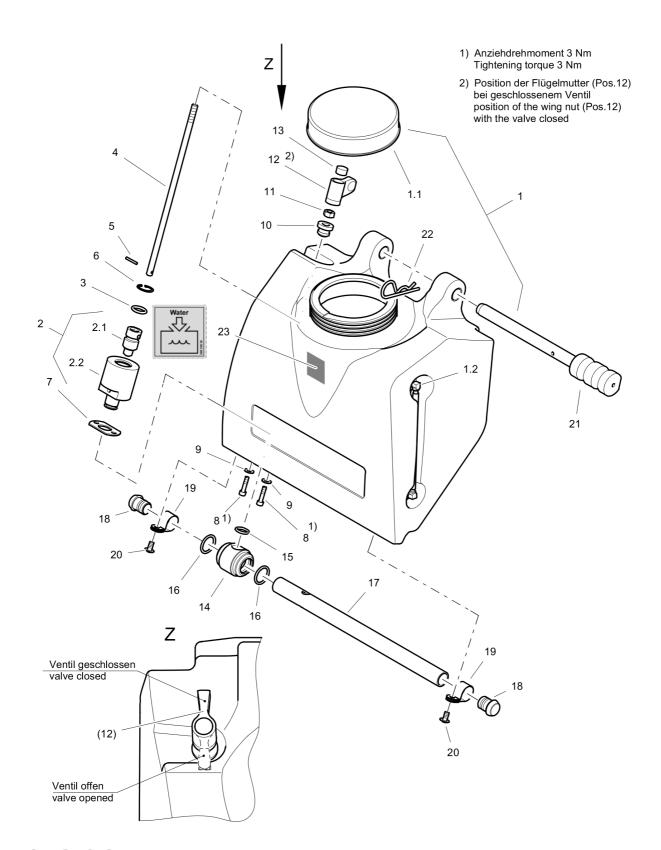


Item	Part No.	Qty	Name	SN INFO
KIT	DL23003471		Water tank, assembled	
1	DL23003470	1	Tank, cpl.	
1.1	DL23003289	1	Tank cover	
1.2	DL23003319	1	Filling level indicator	
2	DL23003447	1	Valve	
2.1	DL23003448	1	Adjustment sleeve	
2.2	DL23003449	1	Intake	
3	DL06220148	1	Loop ring	
4	DL23003446	1	Rod	
5	DL09133514	1	Grooved dowel pin	
6	DL09220901	1	Circlip, internal	
7	DL23003347	1	Gasket	
8	DL07230521	2	Socket-head cap screw	
9	DL08621053	2	Washer	
10	DL06550012	1	Gasket	
11	DL08110813	1	Hexangon nut	
12	DL06420840	1	Wing nut	
13	DL06420841	1	Cap, cover	
14	DL23003452	1	Tube holder	
15	DL06220147	1	Loop ring	
16	DL06220223	2	Loop ring	
17	DL23003450	1	Tube	
18	DL23003451	2	Plug	
19	DL05551959	2	Tube clamp	
20	DL07210609	2	Pens head screw	
21	DL23003180	1	Bolt	
22	DL05994004	1	Spring cotter	
23	DL00833835	1	Decal, indication	

#### **Special Equipment** DL23000214\_00 L19-Comfort handle

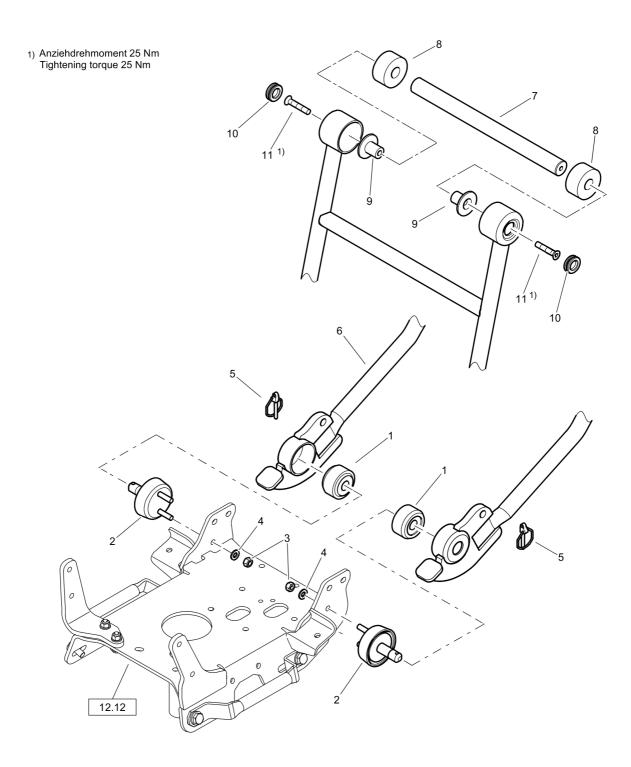


Item	Part No.	Qty	Name	SN INFO
1	DL23003476	2	Bushing	
2	DL23003475	2	Spring element	
3	DL08130813	4	Safety nut	
4	DL08510817	4	Washer	
5	DL05931600	2	Linch pin	
6	DL23060278	1	Steering handle	
7	DL23060333	1	Shaft	
8	DL23060282	2	Expanded rubber	
9	DL23060283	2	Stop	
10	DL05756120	2	Wall duct	
11	DL07320829	2	Countersunk screw	
12.12	-		Engine Carrier	

#### **Special Equipment** DL23000218\_00 L20-Comfort handle,middle

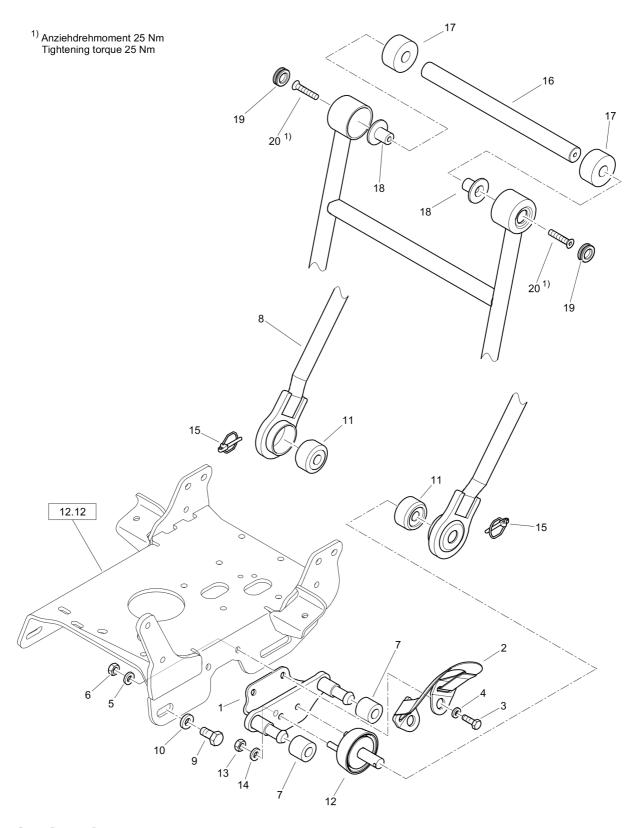

Item	Part No.	Qty	Name	SN INFO	
1	DL23003484	2	Holder		
2	DL88003146	2	Band, belt		
3	DL07140842	4	Hexagon bolt		
4	DL08500823	4	Round anchor plate		
5	DL08510817	4	Washer		
6	DL08130813	4	Safety nut		
7	DL23060325	4	Buffer		
8	DL23003425	1	Steering handle		
9	DL07141017	4	Hexagon bolt		
10	DL08501028	4	Washer		
11	DL23003476	2	Bushing		
12	DL23003475	2	Spring element		
13	DL08130813	4	Safety nut		
14	DL08510817	4	Washer		
15	DL05931600	2	Linch pin		
16	DL23003428	1	Shaft		
17	DL23060282	2	Expanded rubber		
18	DL23060283	2	Stop		
19	DL05756120	2	Wall duct		
20	DL07320829	2	Countersunk screw		
12.12	-		Engine Carrier		


#### Special Equipment DL23000614\_01 T90-Transport wheels,mid bow

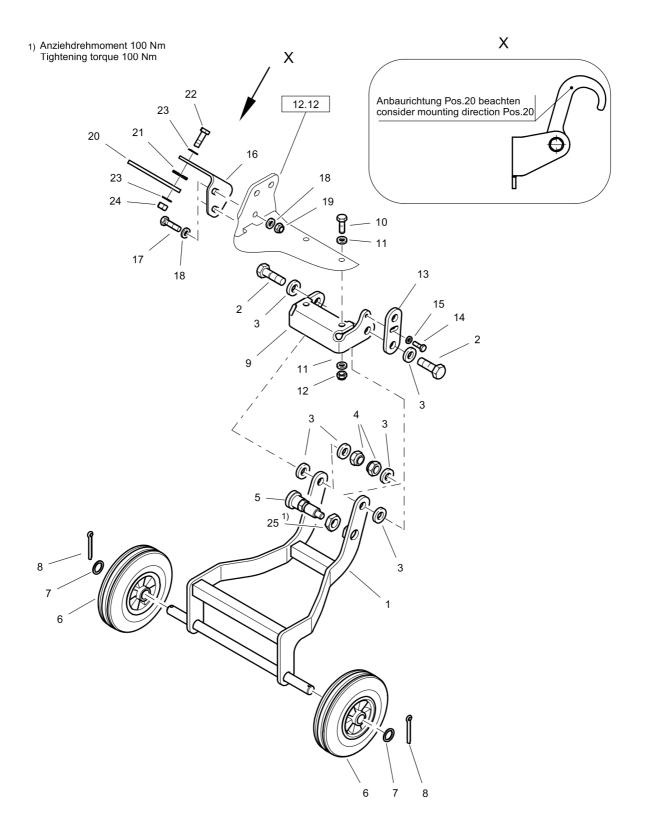

Item	Part No.	Qty	Name	SN INFO
1	DL23003314	1	Frame	
2	DL07141242	2	Hexagon bolt	
3	DL08511324	6	Washer	
4	DL08131218	2	Safety nut	
5	DL06422046	1	Control pin	
6	DL06704107	2	Wheel	
7	DL05520315	2	Supporting disc	
8	DL09170407	2	Cotter pin	
9	DL23003248	1	Holder	
10	DL07140834	2	Hexagon bolt	
11	DL08510817	4	Washer	
12	DL08130813	2	Safety nut	
13	DL23003354	1	Detent	
14	DL07140626	1	Hexagon bolt	
15	DL08590617	1	Washer	
16	DL23003460	1	Holder	
17	DL07140834	2	Hexagon bolt	
18	DL08510817	4	Washer	
19	DL08130813	2	Safety nut	
20	DL23003455	1	Hook	
21	DL68050213	1	Washer	
22	DL07140834	1	Hexagon bolt	
23	DL09290169	2	Belleville spring	
24	DL08130813	1	Safety nut	
25	DL08141615	1	Hexagon nut	
12.12	-		Engine Carrier	

Special Equipment DL23000616\_00 T1-Transport wheels

1) Anziehdrehmoment 100 Nm Tightening torque 100 Nm

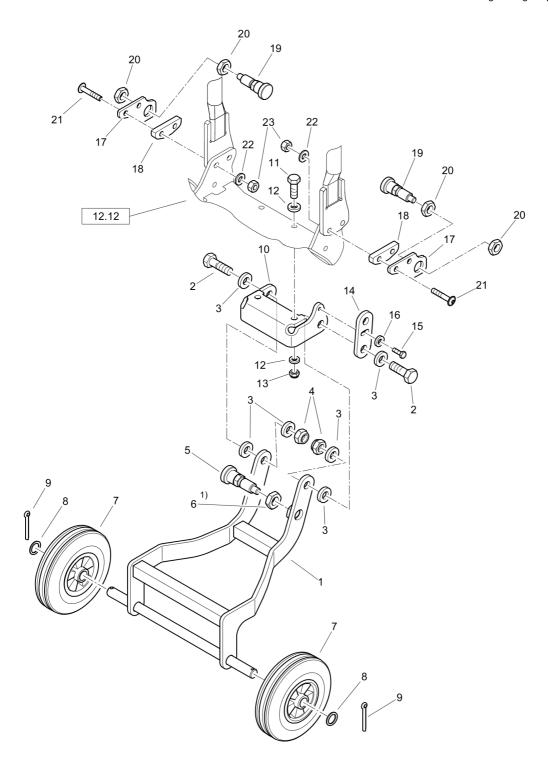

Item	Part No.	Qty	Name	SN INFO		
1	DL23003314	1	Frame			
2	DL07141242	2	Hexagon bolt			
3	DL08511324	6	Washer			
4	DL08131218	2	Safety nut			
5	DL06422046	1	Control pin			
6	DL08141615	1	Hexagon nut			
7	DL06704107	2	Wheel			
8	DL05520315	2	Supporting disc			
9	DL09170407	2	Cotter pin			
10	DL23003248	1	Holder			
11	DL07140834	2	Hexagon bolt			
12	DL08510817	4	Washer			
13	DL08130813	2	Safety nut			
14	DL23003354	1	Detent			
15	DL07140626	1	Hexagon bolt			
16	DL08590617	1	Washer			
17	DL23003479	2	Plate			
18	DL23003480	2	Plate			
19	DL06422046	2	Control pin			
20	DL08141615	4	Hexagon nut			
21	DL07210820	4	Pens head screw			
22	DL08510817	4	Washer			
23	DL08130813	4	Safety nut			
12.12	-		Engine Carrier			

